

Wizard Motorized SmartScreen

Do's & Don'ts

DO 	DON'T 
Clean mesh with soft cloth and mild detergent	Vacuum mesh. The vacuum head could catch on and rip the mesh
Use silicone spray to lubricate the tracks	Use WD-40 or other degreasers. Those will clog the tracks
Leave the mesh stationary if it is windy. The mesh designed to withstand winds between 60 and 80 mph (depending on size & installed location)	Move the mesh if windy. There is a high likelihood that moving the mesh in the wind will cause more damage than the wind itself
Retract the screen when not in use	Use the screen solely as a wind breaker
Call your local Wizard dealer if there is an issue	Try and fix an issue yourself as that could cause an issue that would void the warranty