



BetterView

Measuring Guide

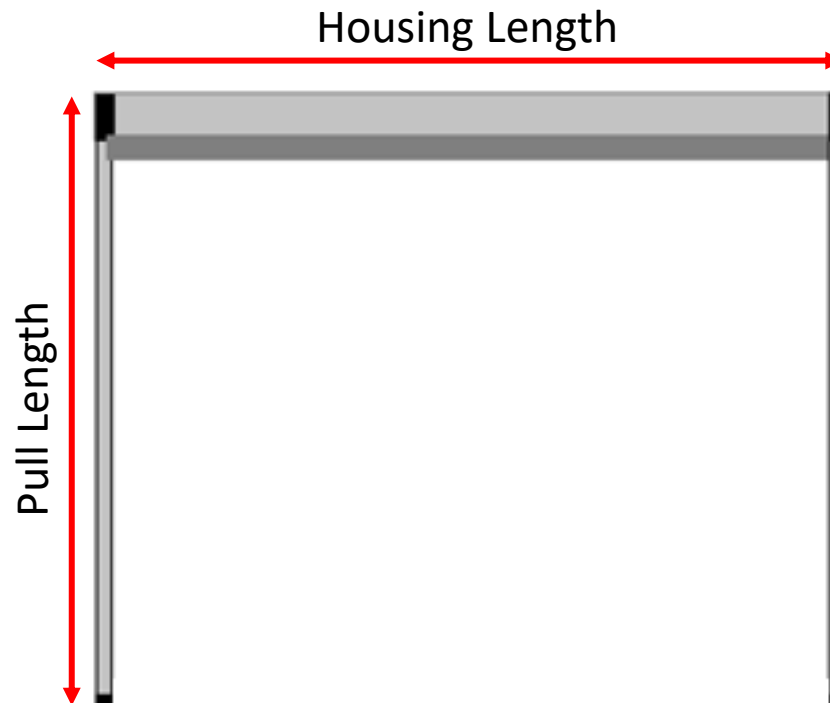

REQUIRED

Tape Measure

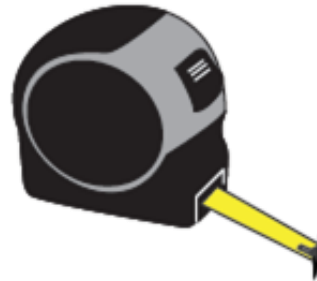

Pencil



OPTIONAL

Laser Distance Measure








2-way Laser Level



Spirit Level






	DOOR	WINDOW Surface or Reveal Mount	WINDOW Reveal Mount
PULL-DOWN			
PULL-ACROSS			

Pull Length = back of housing to end of track corner/cap

Housing Length = housing endcap to housing endcap

*NOTE: Do **not** use the terms “Width” and “Height” because:

1. The unit can be oriented in **two** ways.
2. Confusion is avoided.

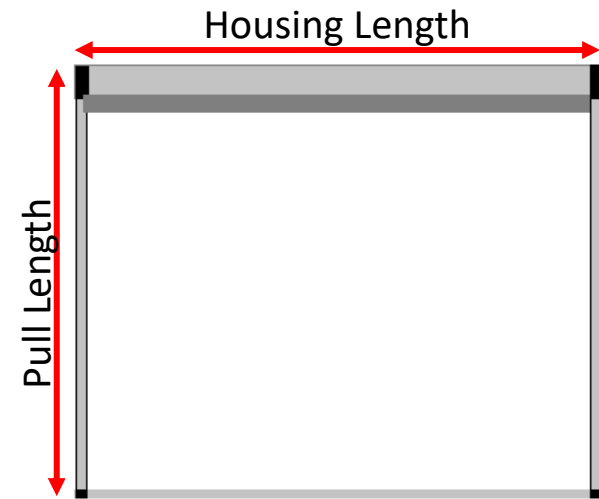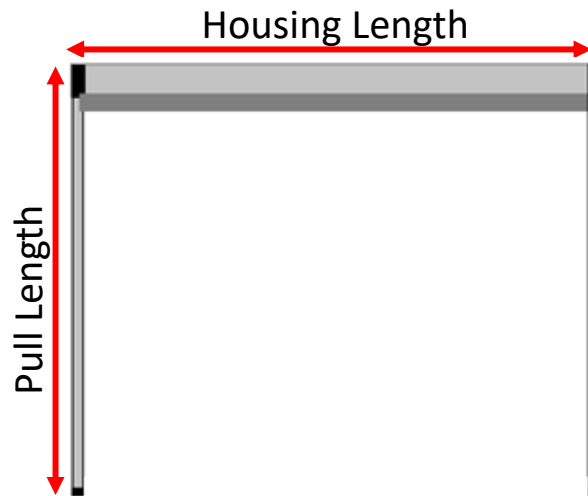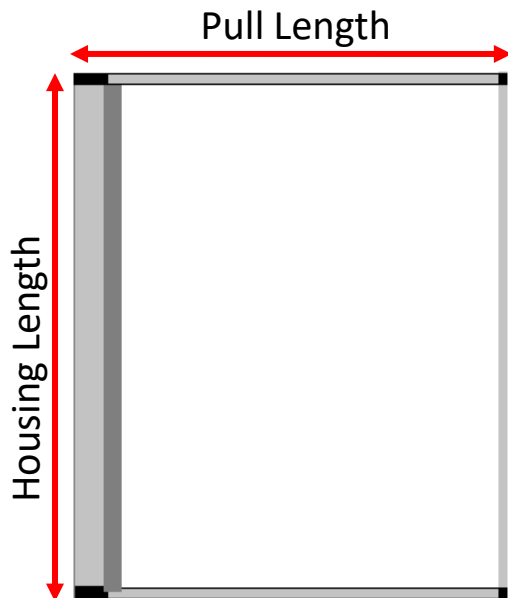

Check opening for plumb, level, straight, and square.

HOUSING Length


1. Measure at 3 spots along **pull length run**:
 - a. For “in-jamb”, record **smallest measurement. Deduct 1/8” safety**); or
 - b. For “surface”, record **largest measurement. Add 3”** (thickness of housing and track corner/cap.)

OR

2. Establish marks with level and measure between. Then follow **steps a & b** above.

PULL Length

1. Measure at 3 spots along **housing length run** and record **largest measurement.**

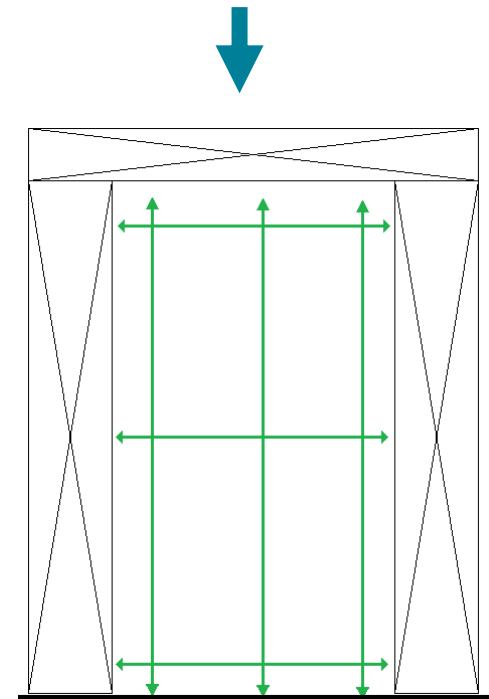

Measuring Consideration with Receiver

Receiver *must* be located where it permits operability of the pullbar from **both sides**.

