 


BetterView

Measuring Guide

REQUIRED

Tape Measure

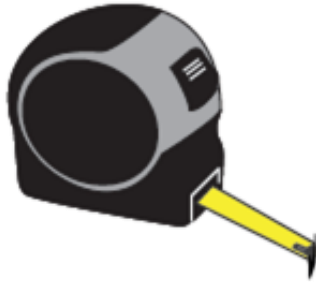

Pencil



Spirit Level



OPTIONAL



Laser Distance Measure



2-way Laser Level



Applicable for “pull-down” and “pull-across” orientations.

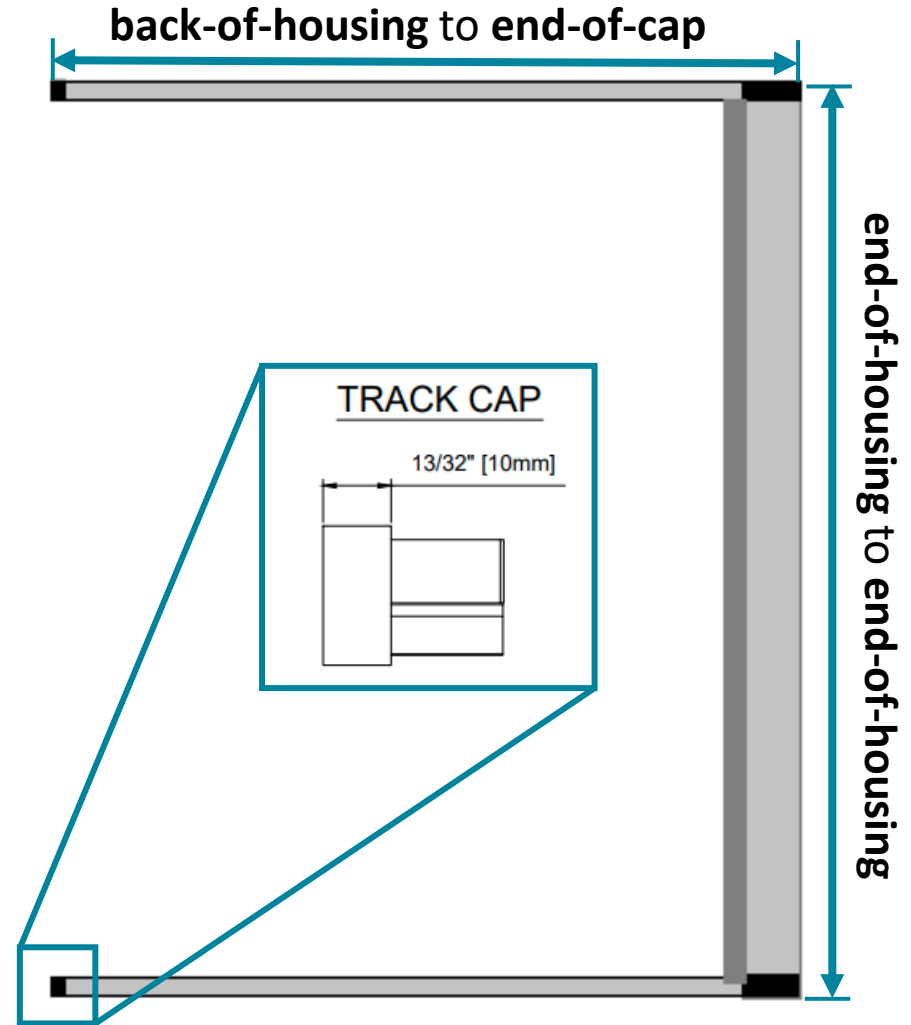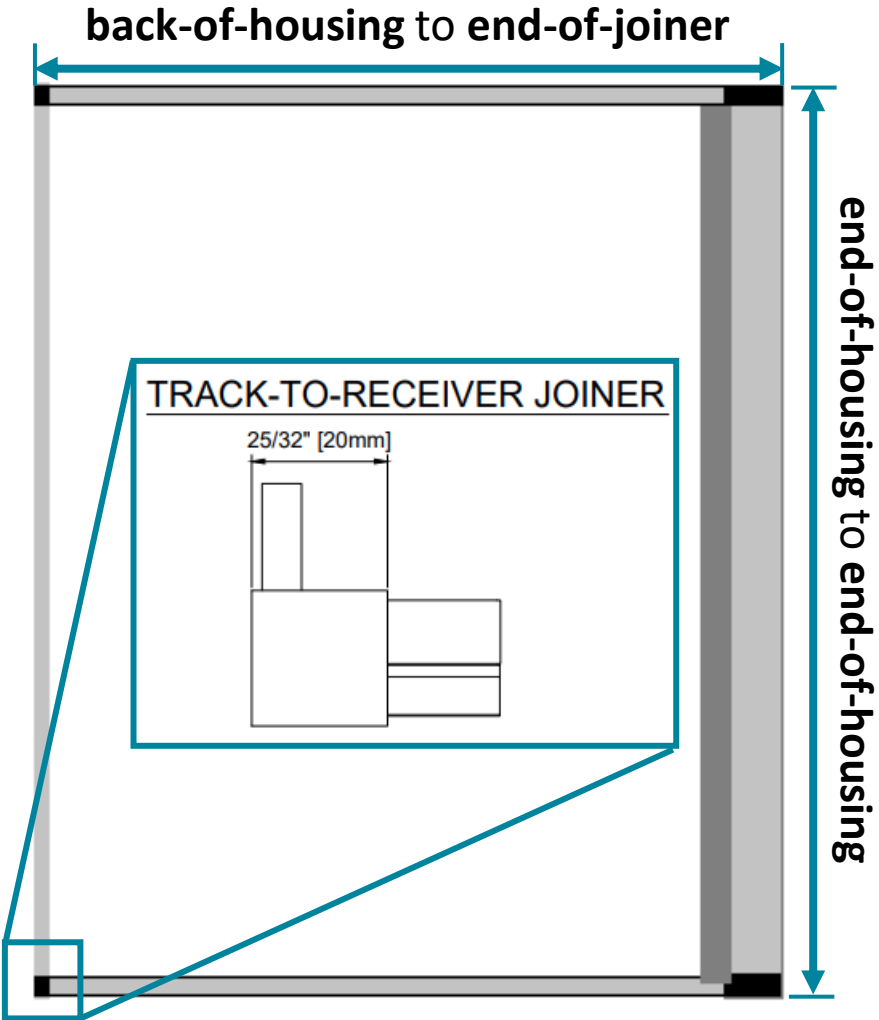

Check opening for **plumb, level, straight, and square.** **BetterView**

Establish marks with level if necessary.

The **additions/deductions** are suggested.


Mounting Method	Measurements	Addition/Deduction	
		Width	Height
In-Jamb Fit	Record smallest WxH measurements	0"	- 1/16"* (safety)
Face Fit	Record largest WxH measurements	+ 3" (housing and receiver thickness)	+ 3/4" (upper track thickness)

* If using BetterView sill adapter, -1/8"

OR (Preferred)

1. Establish level & plumb marks.
2. Measure between marks.
3. Deduct/add and record.

***NOTE:** Tracks will come at **3" extra** length. Cut to size on the field.

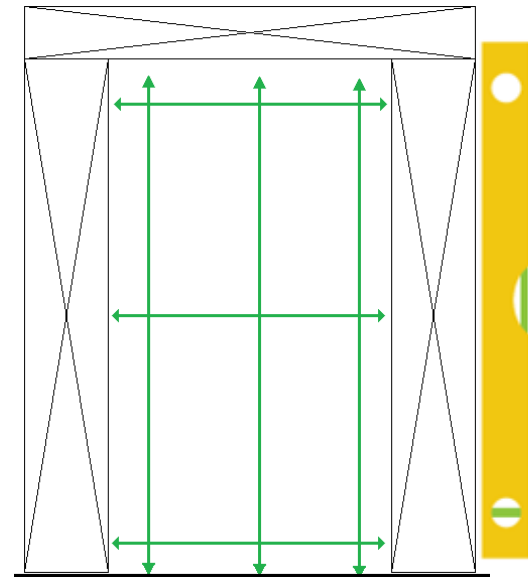

The measuring principles for a PULL-ACROSS can apply for a PULL-DOWN. Just switch **width** and **height** around.

The measuring steps are **suggestions**.
It is ultimately up to the installer's
discretion what size the unit should be.

Measuring Consideration with Receiver

Receiver *must* be located where it permits operability of the pull bar from **both sides**.

