




100mm Frame & Screen Order Measurements

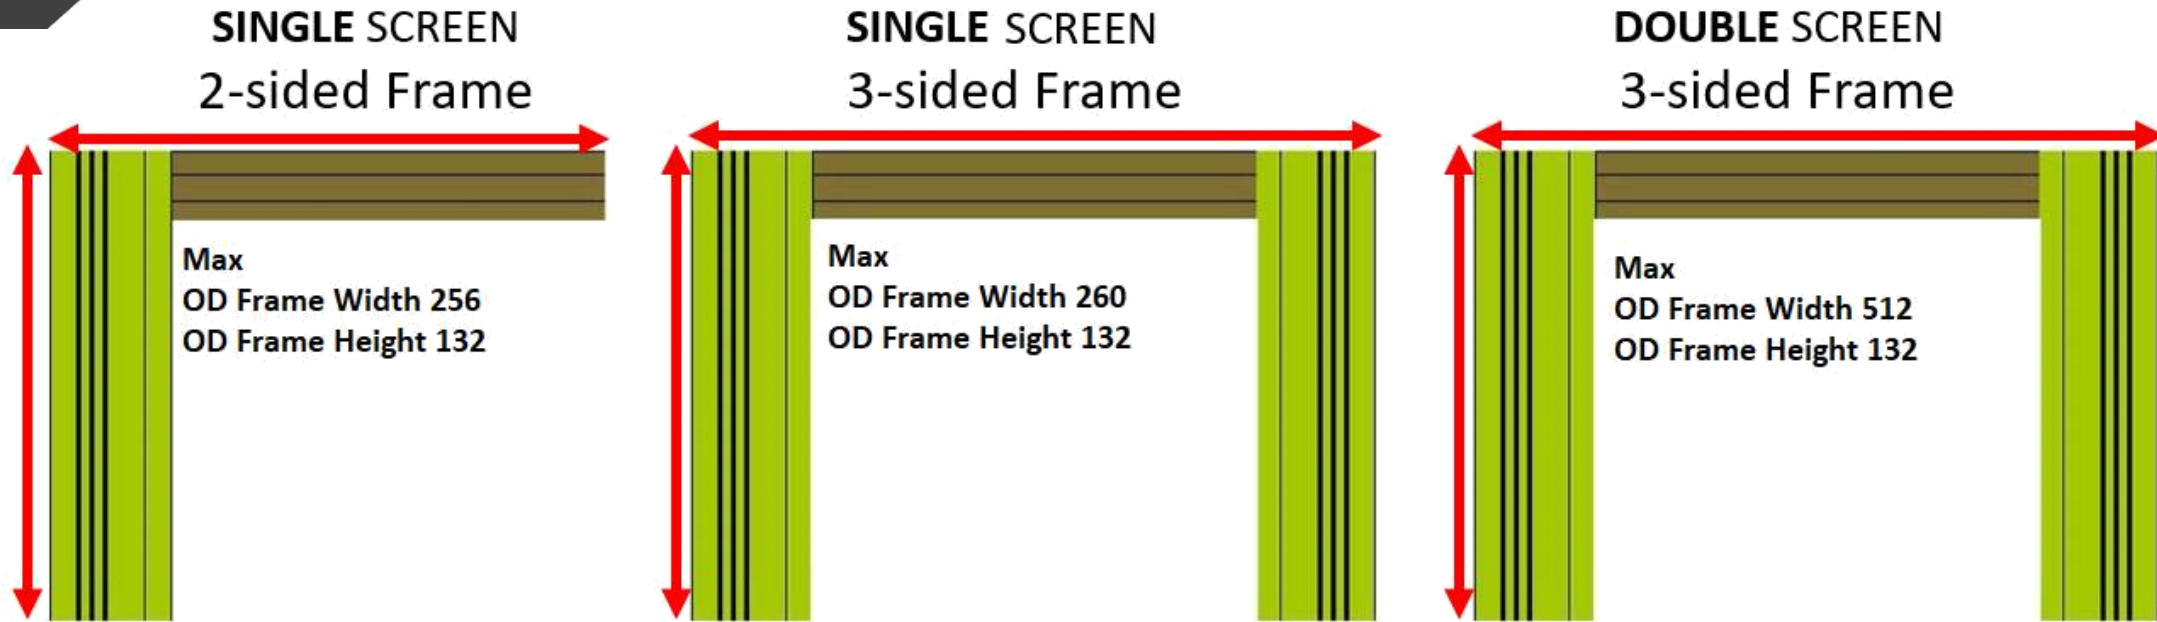

Step 1: Determine **overall dimensions** and round **UP** to nearest **INCH**



Step 2: Record as **Width** & **Height of Frame**

! Screen handing is determined by looking at the **FRONT** of the **SCREEN**.

FRAME INSTALLED


Screen to fit existing Frame

Looking at **FRONT** of the **SCREEN**



Right-handed Screen

Left-handed Screen

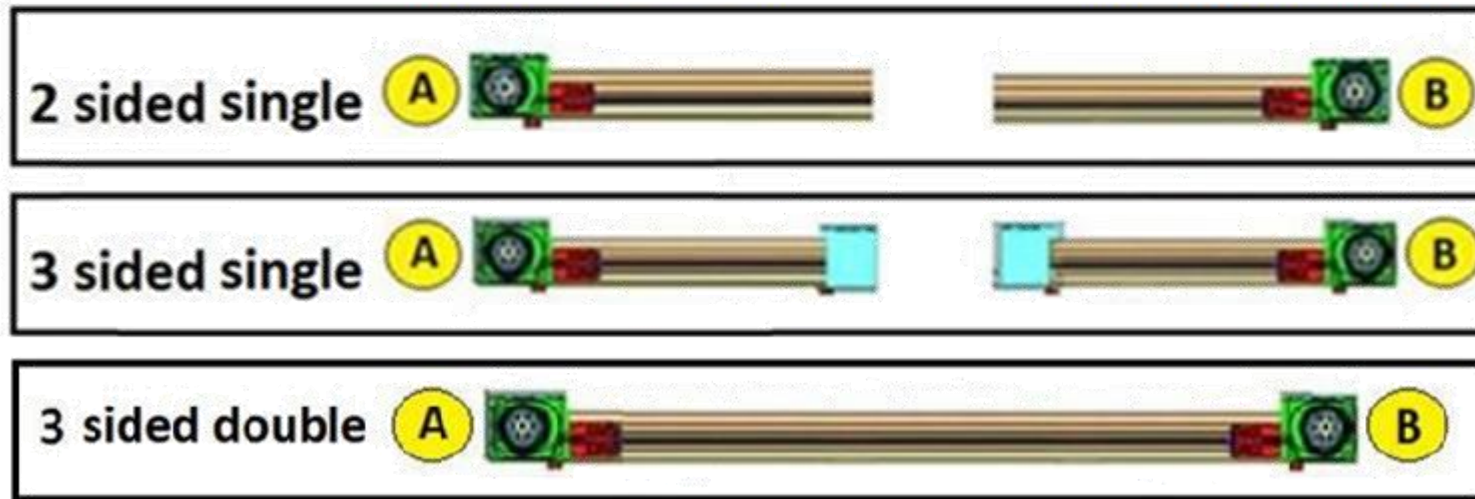


FRONT of FRAME

Step 1: Initial Measurement


FRAME INSTALLED
Screen to fit existing Frame

SINGLE SCREEN
2-sided Frames

Right-hand

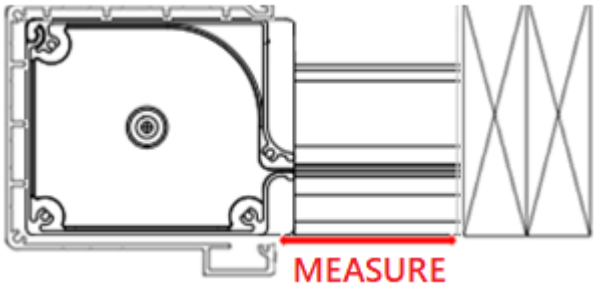


Left-hand

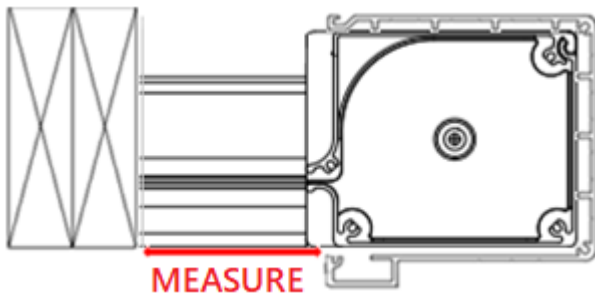


21 June 2022

SINGLE SCREEN
3-sided Frames

Right-hand

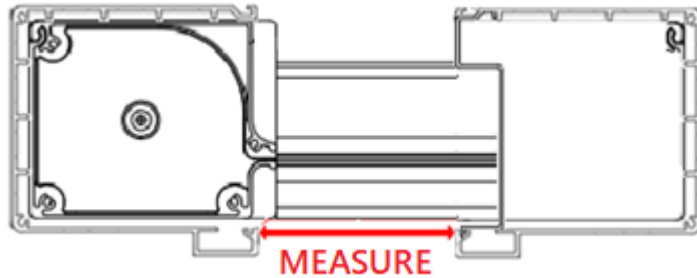


Left-hand

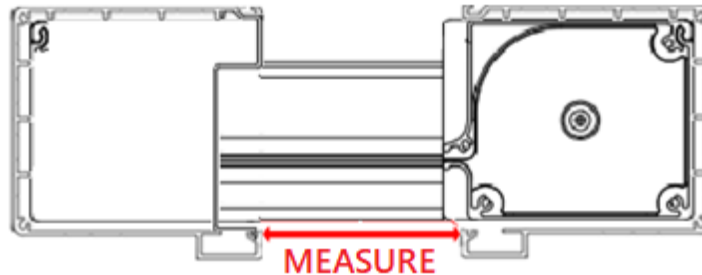

The Horizon Integrated 100mm Frame & Screen Order
Measurements

DOUBLE SCREENS
3-sided Frame

Right-hand

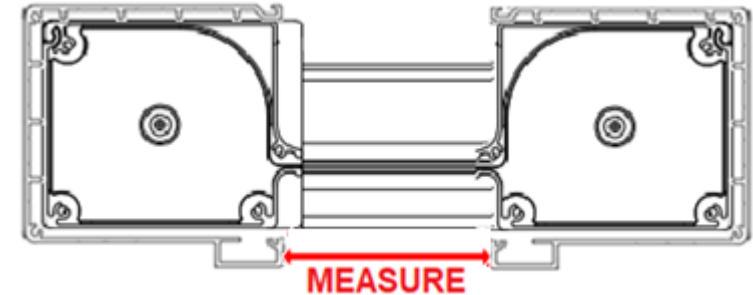

Left-hand


**Step 2: Record
as Width
Measure**

FRAME INSTALLED
Screen to fit existing Frame

Step 1: Initial Measurement

Measure as below in *multiple spots* to find **largest vert. measurement**

2 or 3 Sided Frame

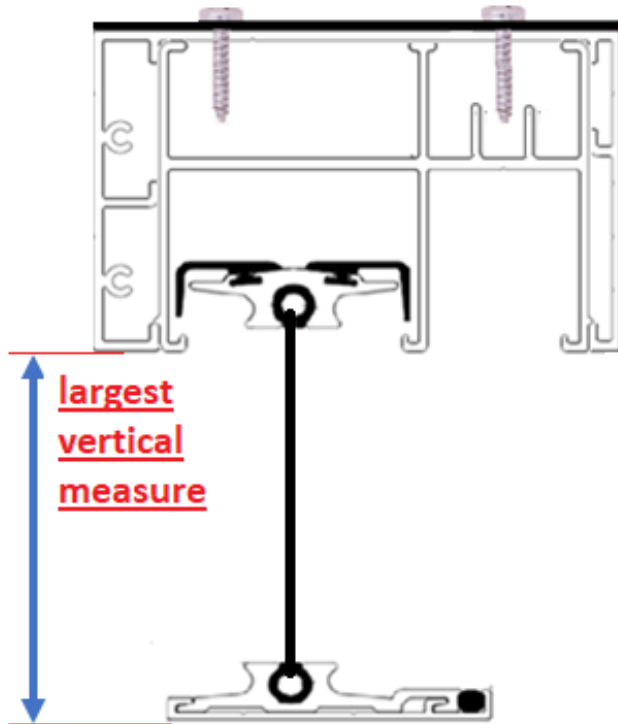

Step 2:
Record as
Height Measure