


SmartScreen

Face Fit

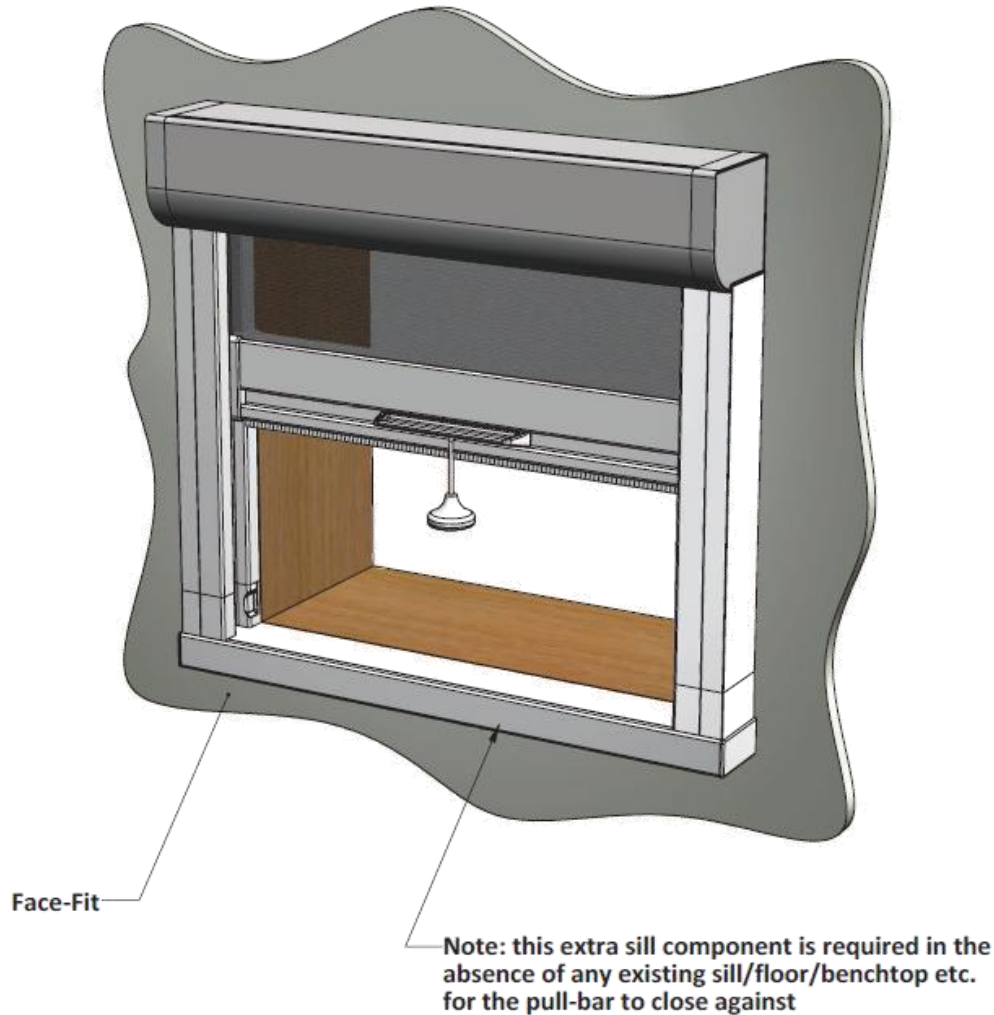

If you have questions, contact support **while on-site**

support@wizardscreens.com

1-888-949-3667

CLICK

First Things

- **READ INSTRUCTIONS BEFORE PROCEEDING.**
- This product is **retrofittable**. Surrounding construction must first be completed, if applicable.
- If concealed, screen unit must be **removable & serviceable**.
- Minimum 2 installers

Unpackaging

- Zippers in slots.
- **Photograph and report** damaged or missing parts *immediately*!
- **Do NOT draw screen on bench! Do NOT draw until tracks installed!**

Preparation

- Inspect at shop.
- Transit to site protected.
- **Report damage to sales rep. with pictures *immediately*.**



Spray tracks
only with dry
silicone.

SmartScreen

5/16" and 1/8"
Drill Bits



#1 and #2
Robertson Driver
Bits




Dry Silicone
Spray



Utility Knife



Chop Saw

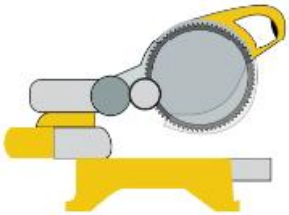

Drill



Step Ladder



Vacuum



Rubber Mallet




2-way Laser Level Kit




Level



Tape Measure


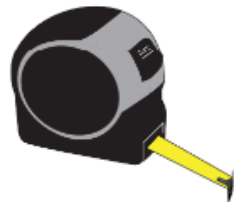


Pencil




Shims




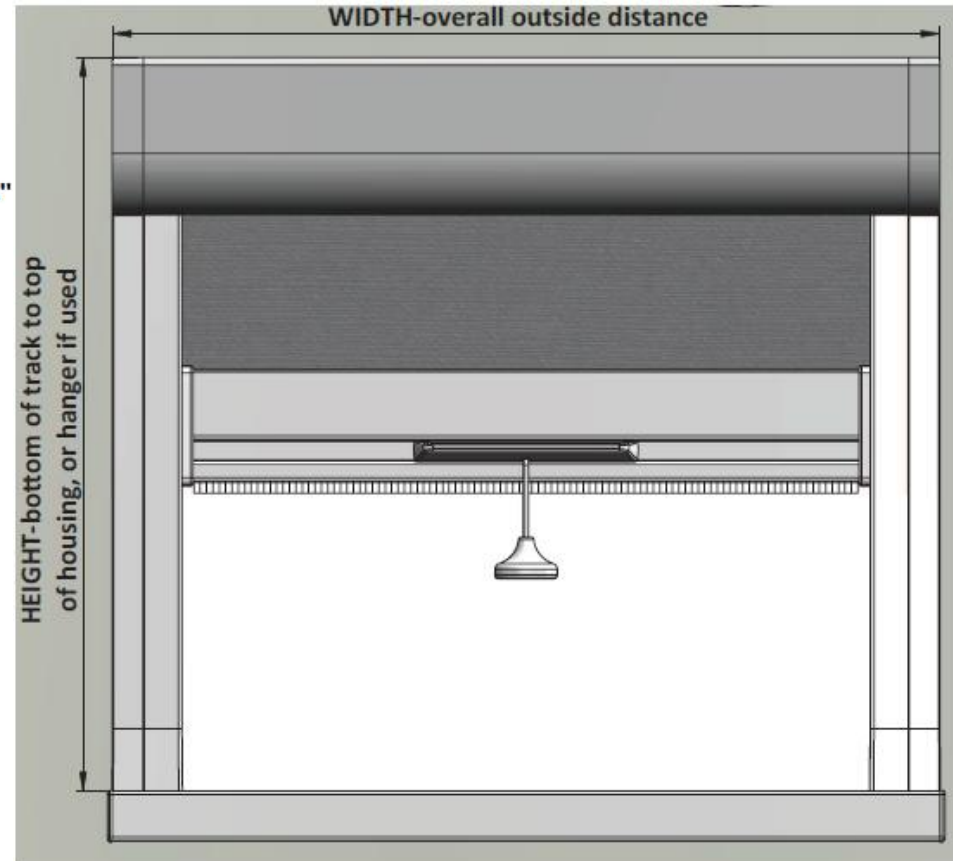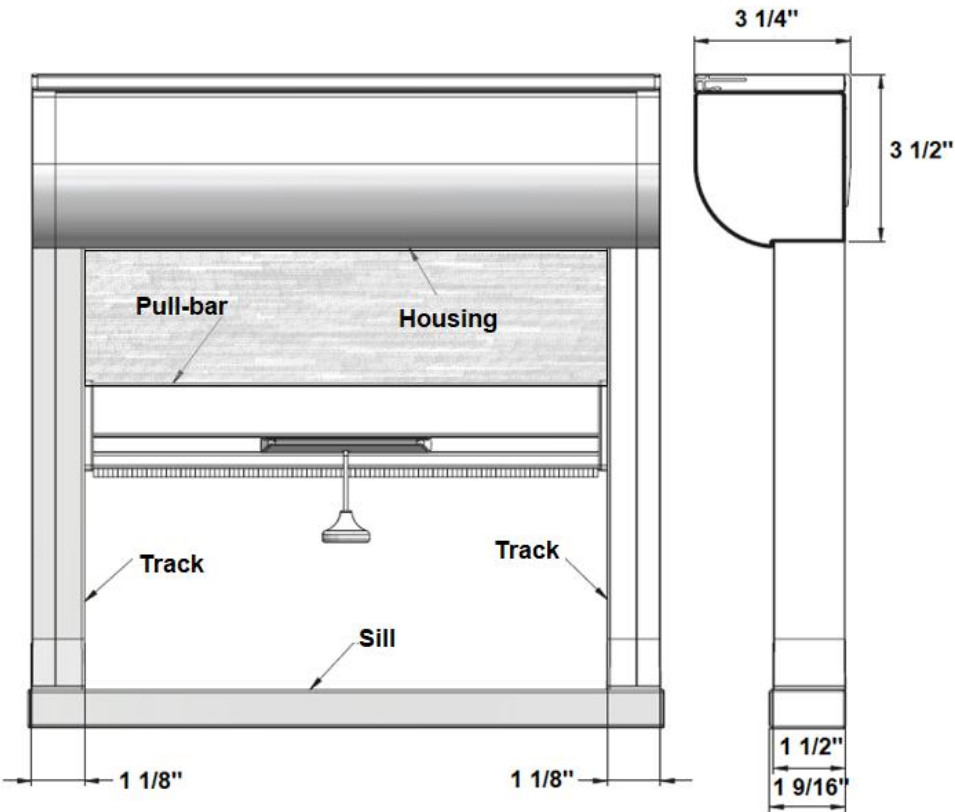

-Drill all 1/8" holes initially then drill 5/16" counterbores as shown below

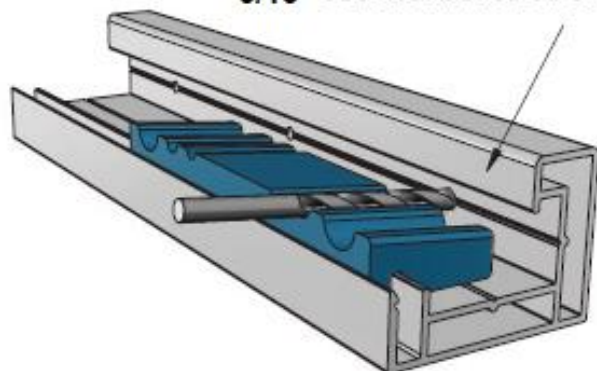

1/8" drill

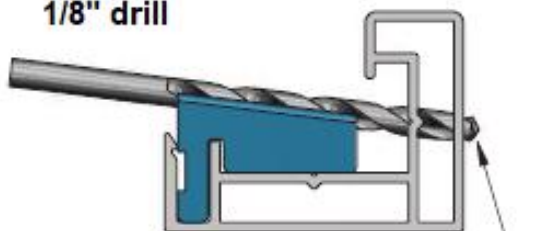


Be sure to drill through both walls of the track


5/16" drill





Be sure to drill through only the inner wall of the track

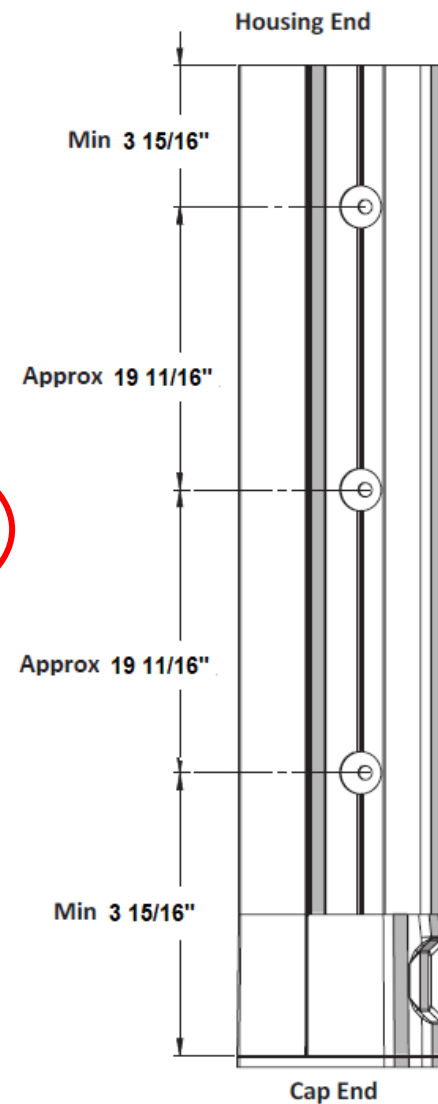

Drill "Housing Hanger"

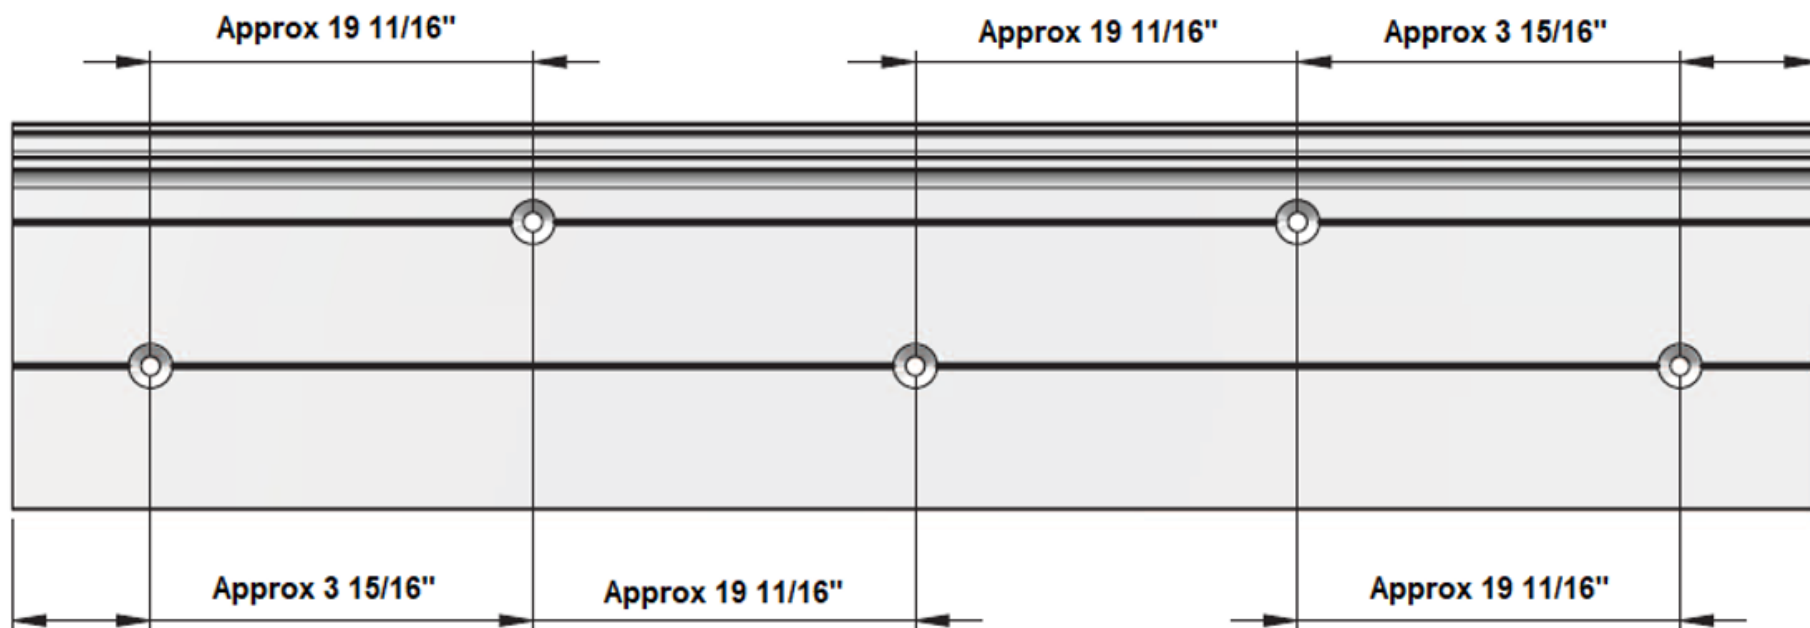

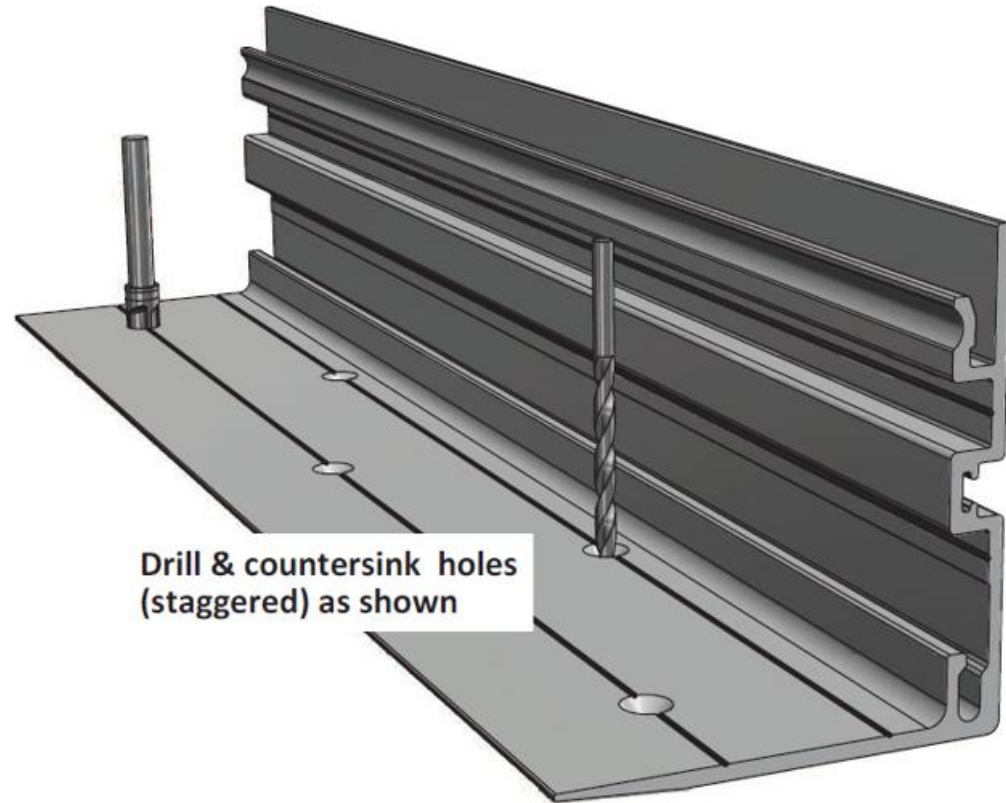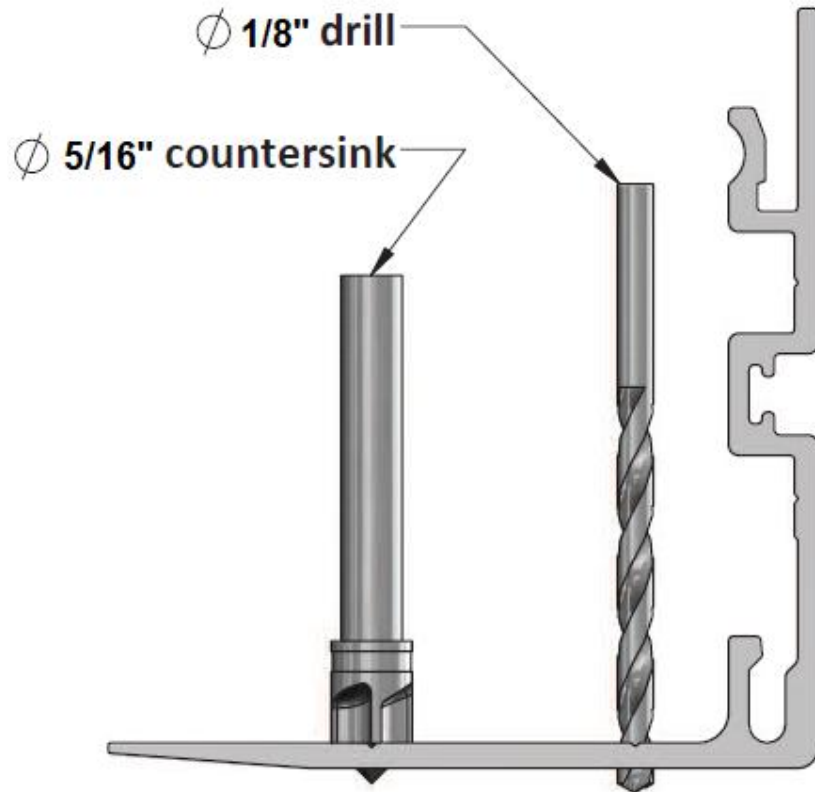


Mount "Housing Hanger"

Secure the hanger to wall at the HEIGHT specified when ordering the screen.
Ensure it is centred to the opening, or offset 8mm for 80mm motorised versions



Screw the hanger in place
with 6g cs screws ensuring no
screws protrude past flush

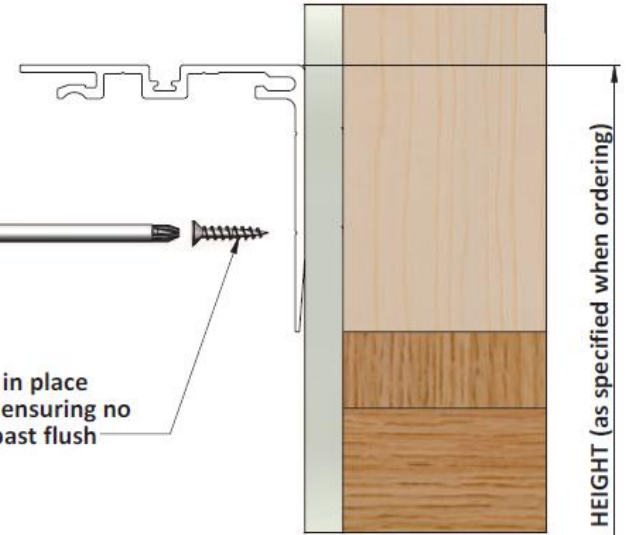


Top of sill/track foot



HEIGHT (as specified when ordering)

Lift & support the housing locating the prongs into hanger opening. Ensure it remains firmly against the underside on the hanger, then starting at one end push the housing toward the wall, working your way along the entire length to engage the securing clip.

Ensure this clip is engaged before fitting the housing lock

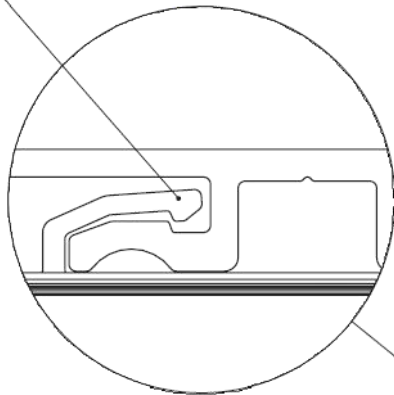


Slide housing lock into hanger, press firmly until it clips into place

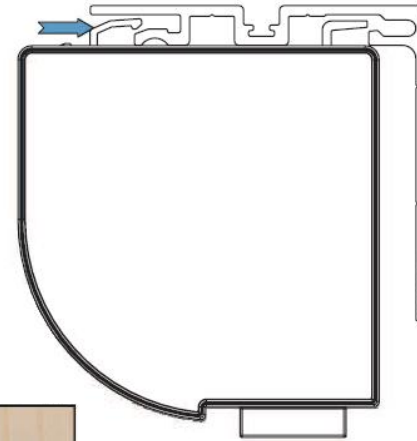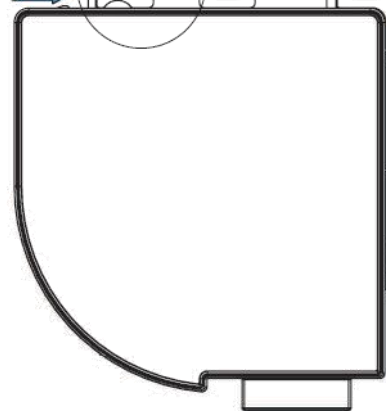


Once positioned screw in place as per 2 3/8" procedure shown on the following page.

Tilt & flex the tracks into place, ensuring they correctly engage the tabs of the housing end caps.

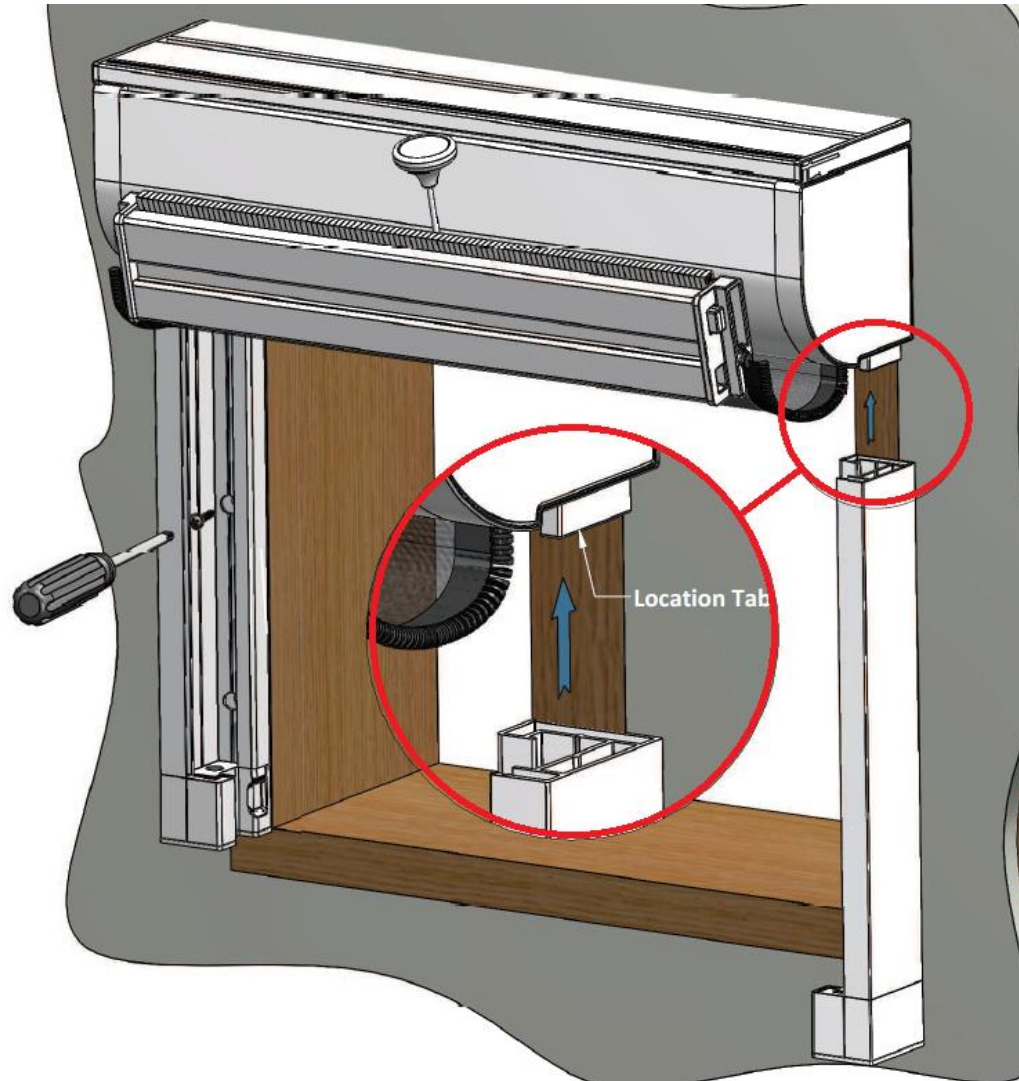

Pull the drawbar down 2" or more to make it easier to feed the zipper into the tracks. Repeat for opposite side.

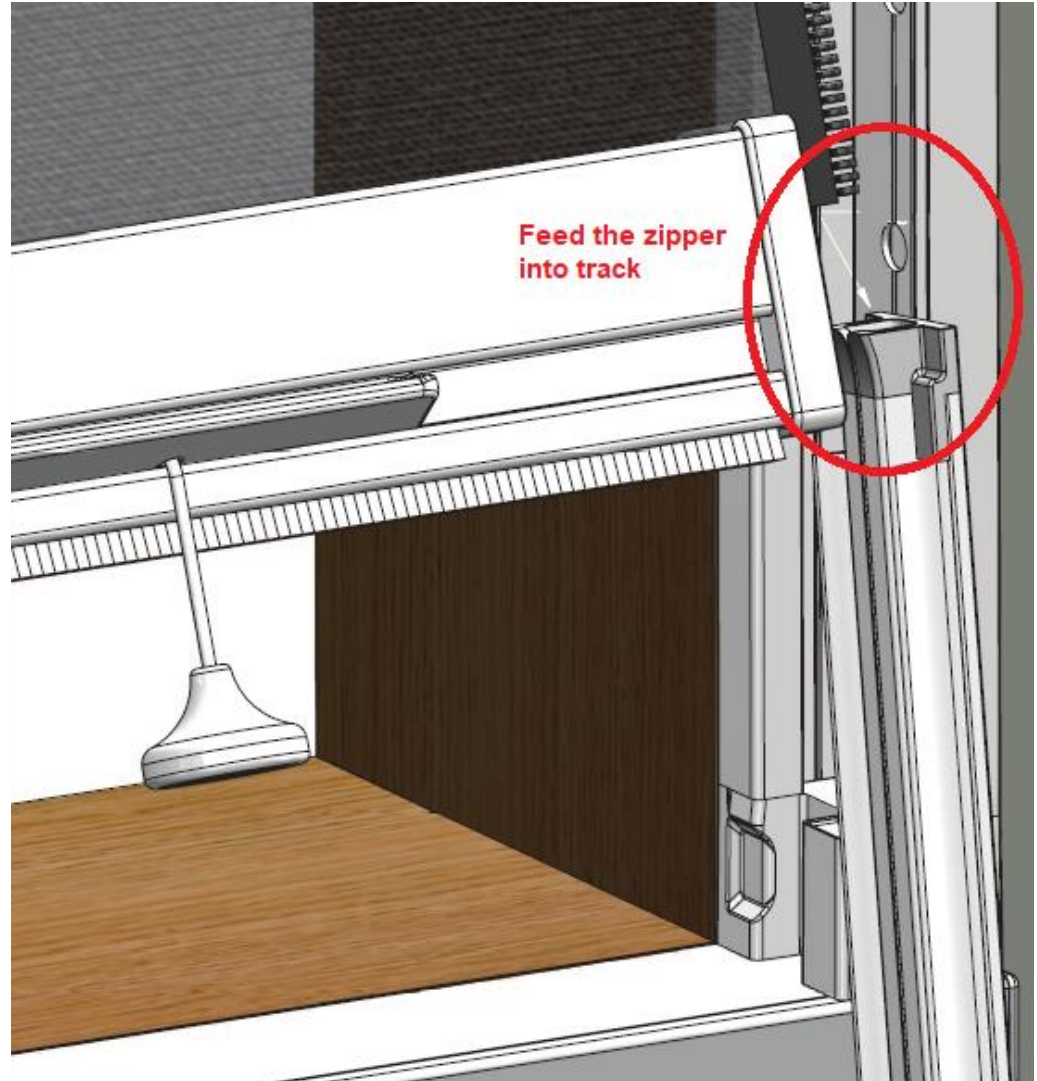


Complete the "Track" assembly for one side only


SmartScreen

Ensure the "Drawbar" is correctly located within the track as shown


1- Rotate Zipper Track into position

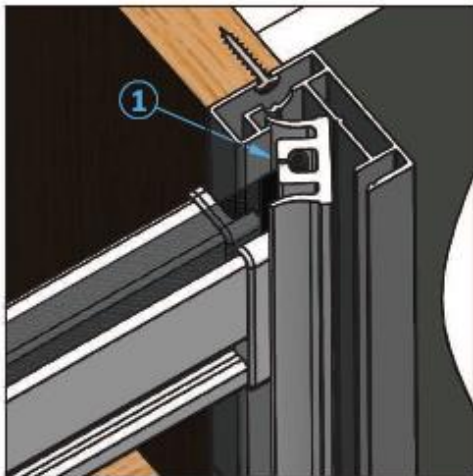


2- Ensure the flexible wing is fully seated

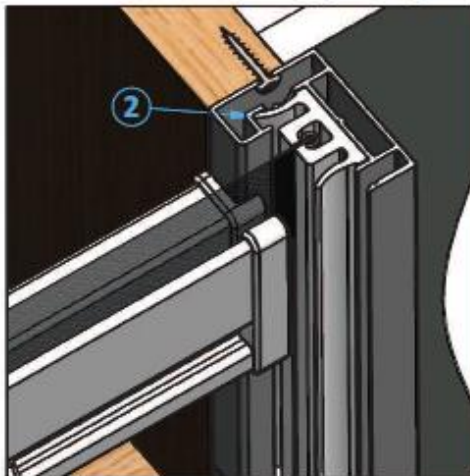


3- Align the "inner track" as shown

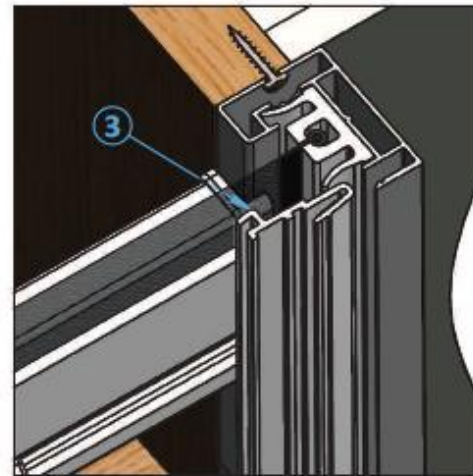


4- Press firmly ensuring it clicks into place

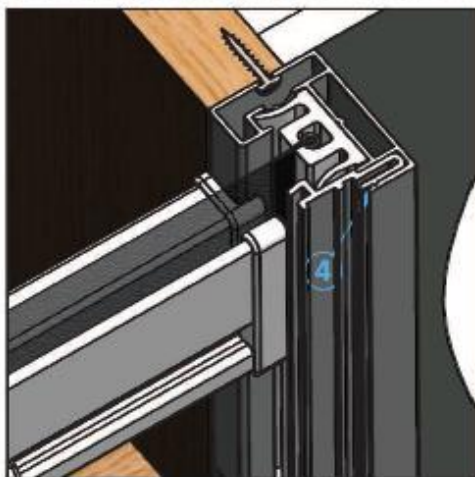


5- Align the "track retainer" as shown

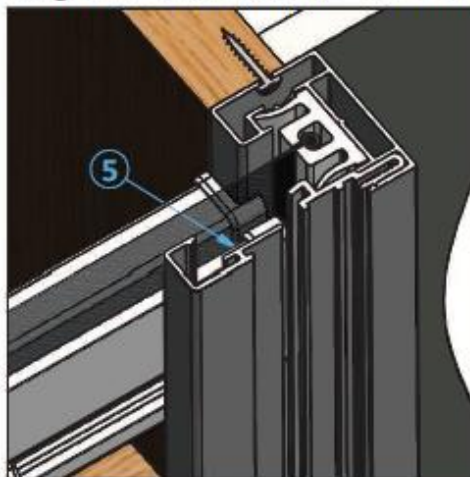



6- Press firmly or soft mallet until seated

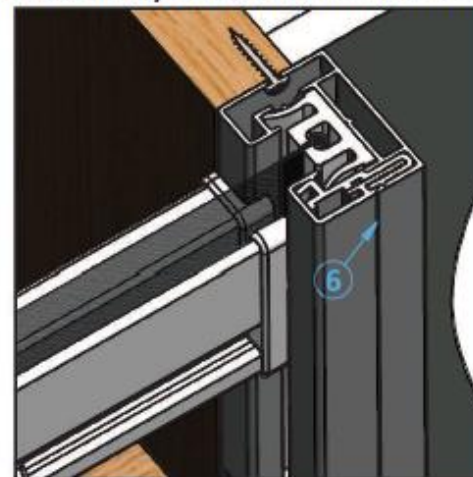

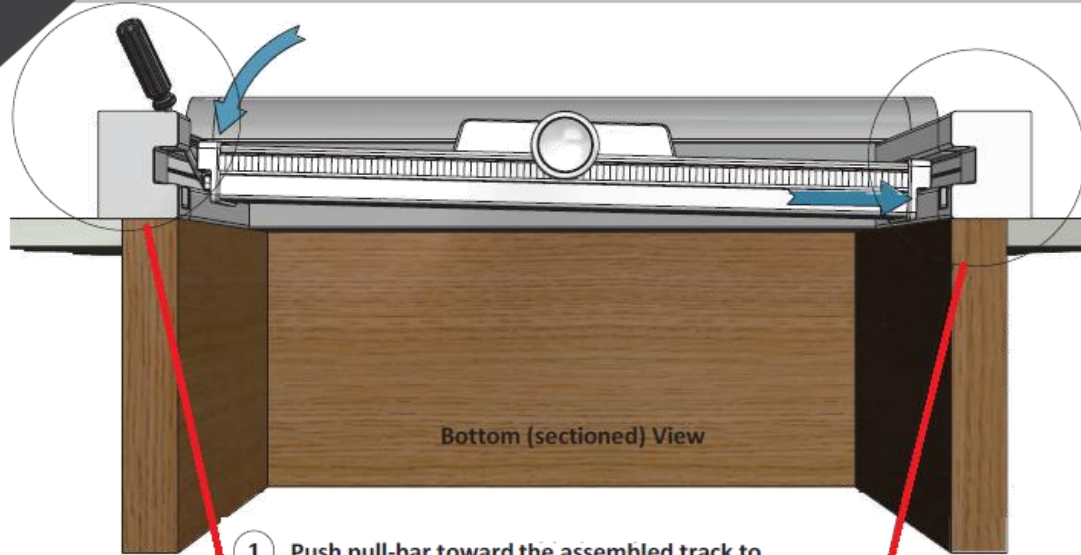

- ① Push pull-bar toward the assembled track to compress the brake against the "fixed rail".


- ③ Once correctly positioned complete "Track Assembly" shown on previous page

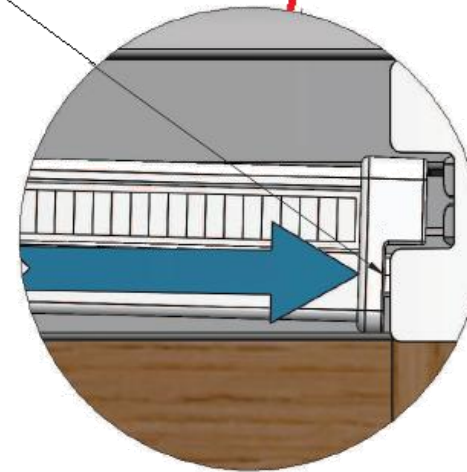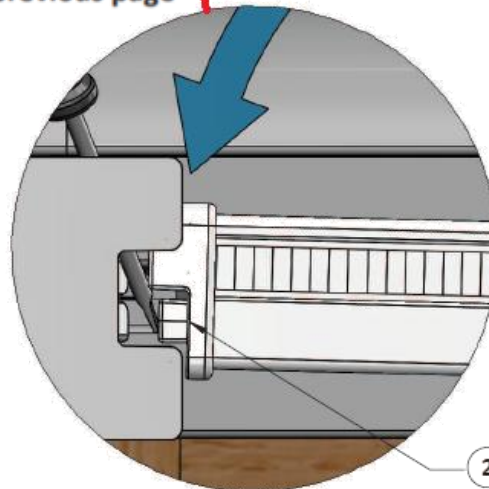


- ② Use a small screwdriver to compress the brake allowing the pull-bar to swing into place



With the screen now assembled, spray a small amount of silicone spray into the zipper tracks. Be careful not to spray the outer tracks or braking surface. Run the pull-bar up & down to check the blind operates smoothly & locks into the "track caps" correctly. For windy areas, or areas with uneven ground the "pull-bar locks" can be fitted. Refer fitting instructions herein.

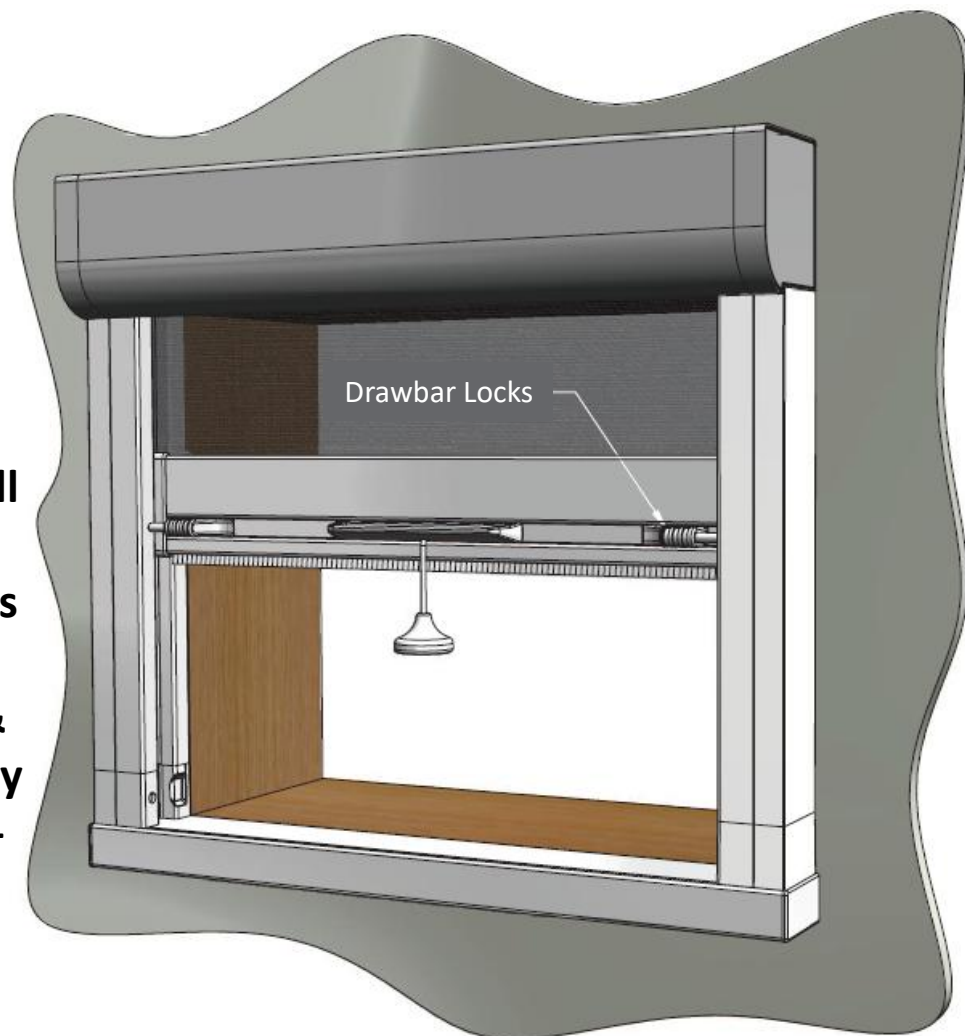

Step-1-
Push lock into pull-bar groove
until it snaps into place

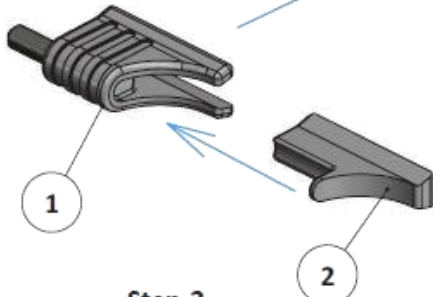

Step-2-
Slide key into lock groove
to secure it in pull-bar

Step-3-
Mark location of lock-pin & drill
M5 hole through track. Multiple
holes can be drilled at desired
locations along the track as needed

