


SmartScreen

In-Jamb Fit

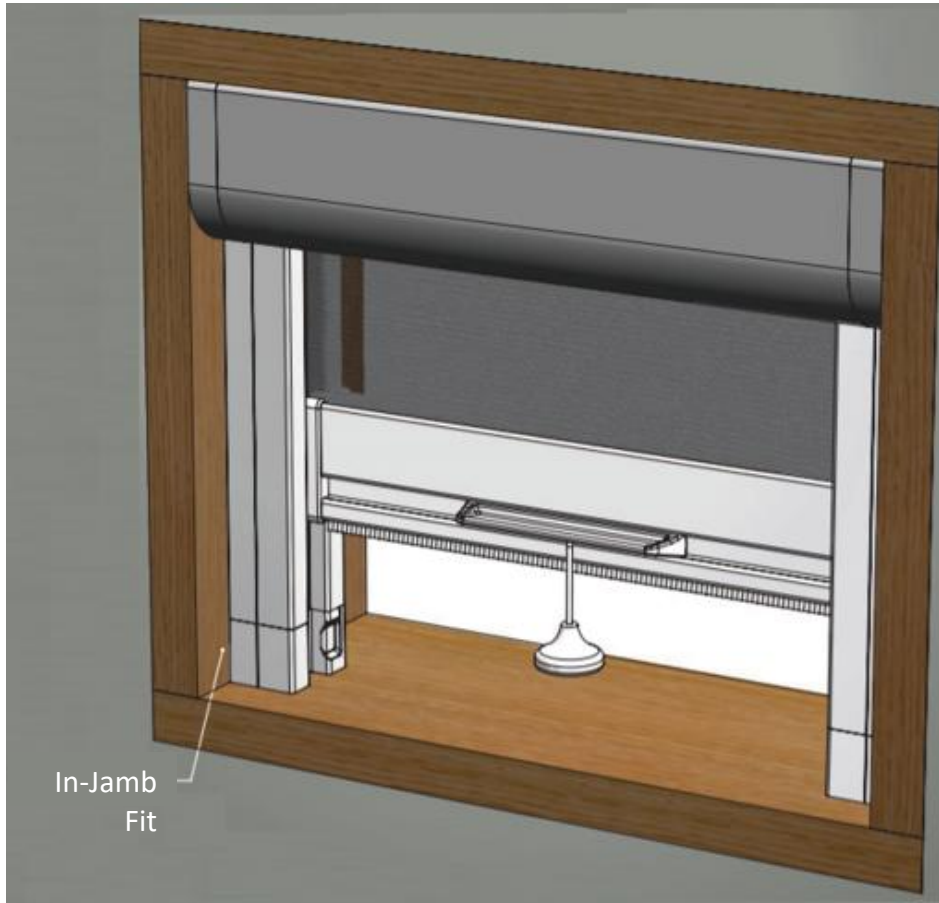

If you have questions, contact support **while on-site**

support@wizardscreens.com

1-888-949-3667

CLICK

First Things

- **READ INSTRUCTIONS BEFORE PROCEEDING.**
- This product is **retrofittable**. Surrounding construction must first be completed, if applicable.
- If concealed, screen unit must be **removable & serviceable**.
- Minimum 2 installers

Unpackaging

- Zippers in slots.
- **Photograph and report** damaged or missing parts *immediately*!
- **Do NOT draw screen on bench! Do NOT draw until tracks installed!**

Preparation

- Inspect at shop.
- Transit to site protected.
- **Report damage to sales rep. with pictures *immediately*.**



Spray tracks
only with dry
silicone.

SmartScreen

5/16" and 1/8"
Drill Bits



#1 and #2
Robertson Driver
Bits




Dry Silicone
Spray



Utility Knife



Chop Saw

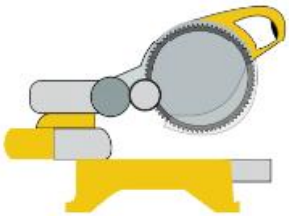

Drill



Step Ladder



Vacuum



Rubber Mallet




2-way Laser Level Kit




Level



Tape Measure


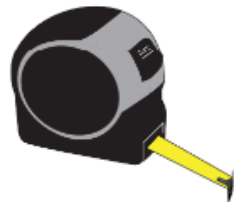




Pencil




Shims



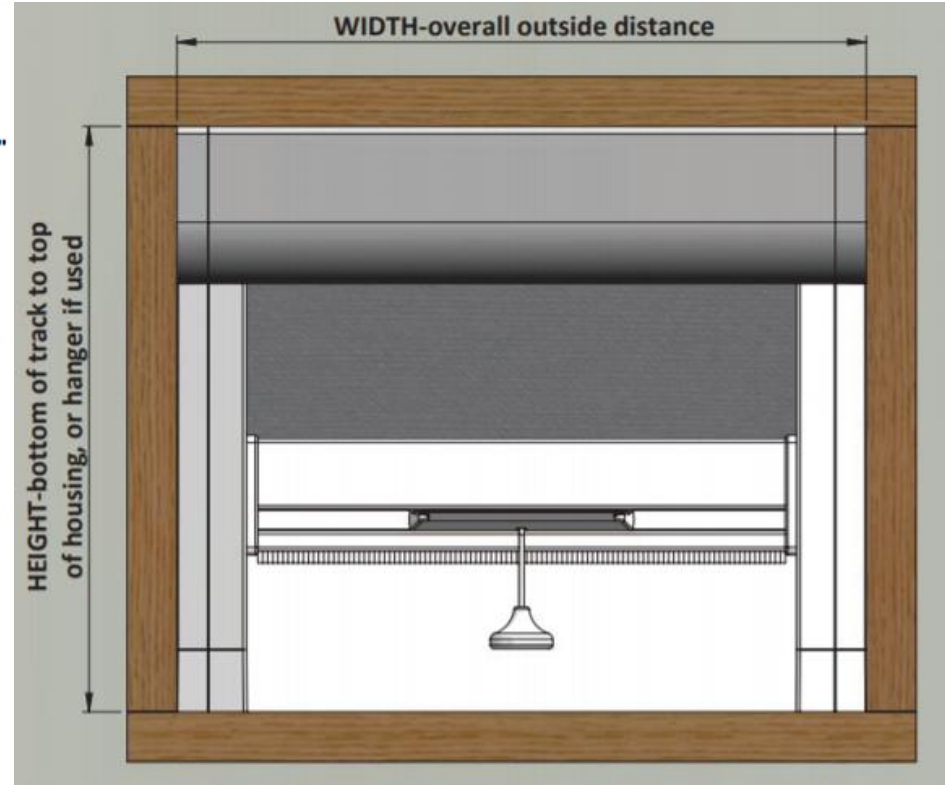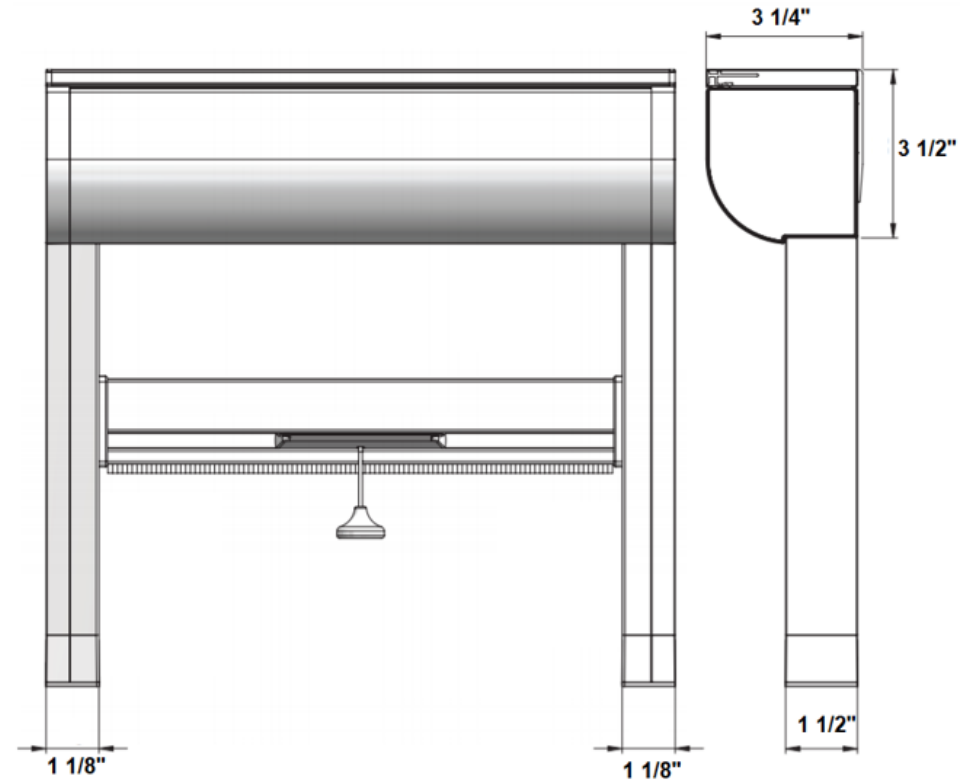

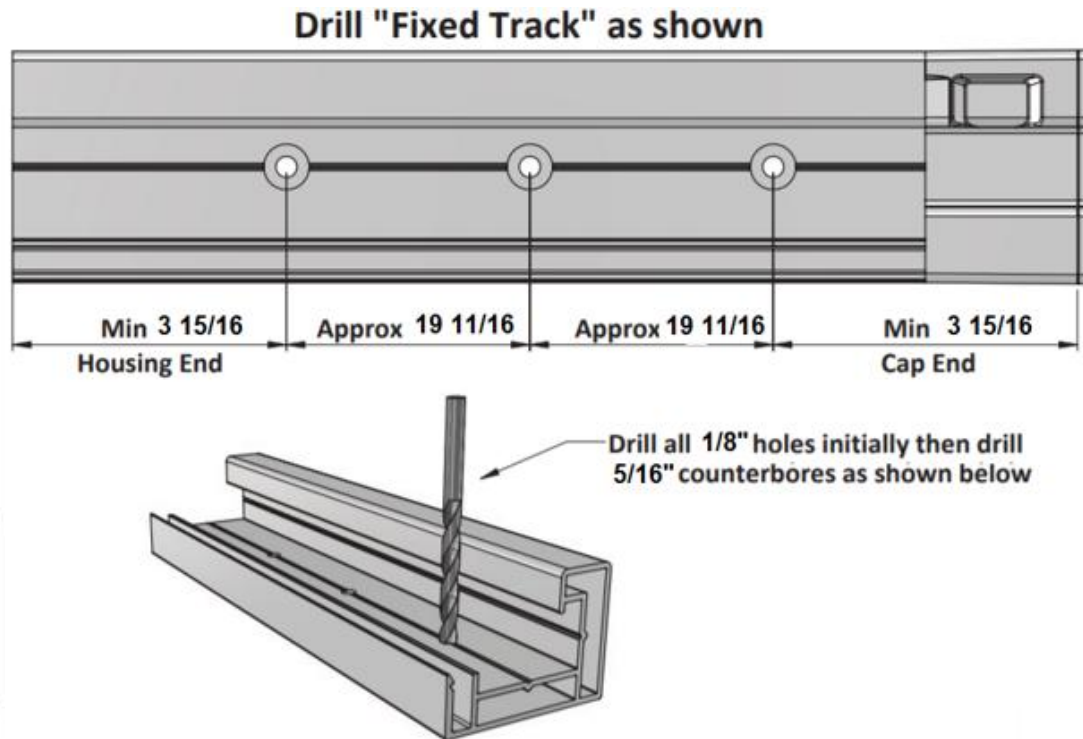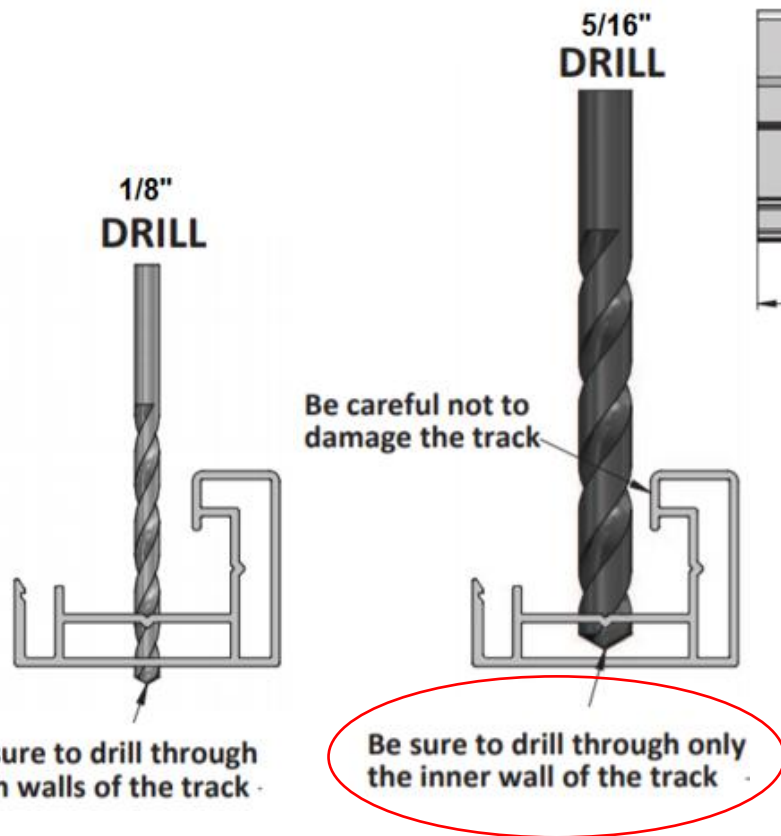

Drill "Housing Hanger"

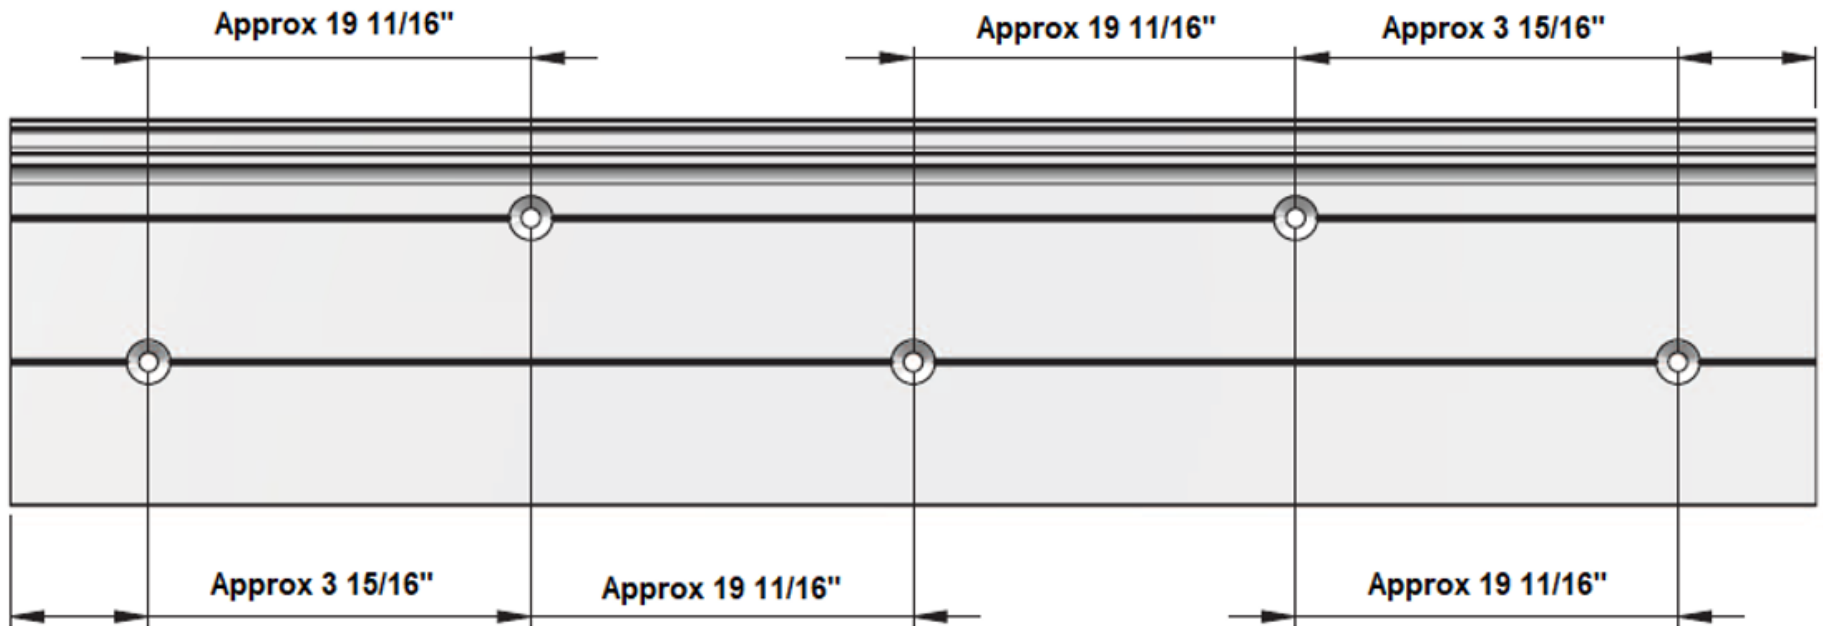


Mount "Housing Hanger"

Use packers if needed to ensure housing hanger is mounted both level & flat across it's entire length



3 1/4" Setback (for flush finish)

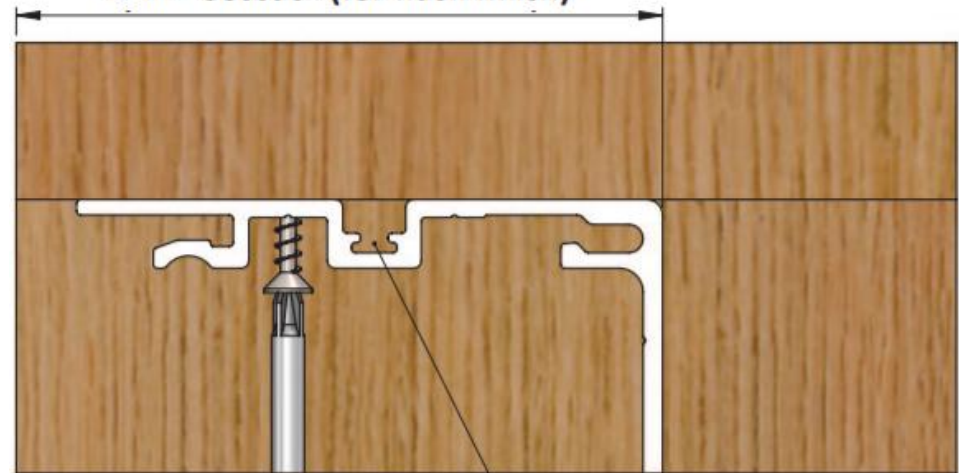

Use appropriate fluff in this channel if gap is present due to packers being used (not shown)



Mount "Housing"

Lift & support the housing locating the prongs into hanger opening. Ensure it remains firmly against the underside on the hanger, then starting at one end push the housing toward the wall, working your way along the entire length to engage the securing clip.

Ensure this clip is engaged before fitting the "housing lock"



Slide "housing lock" into hanger & press firmly until it clips into place

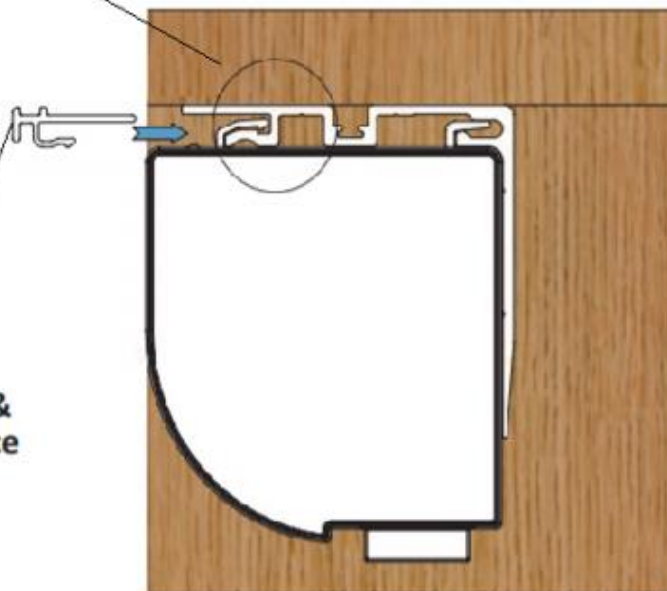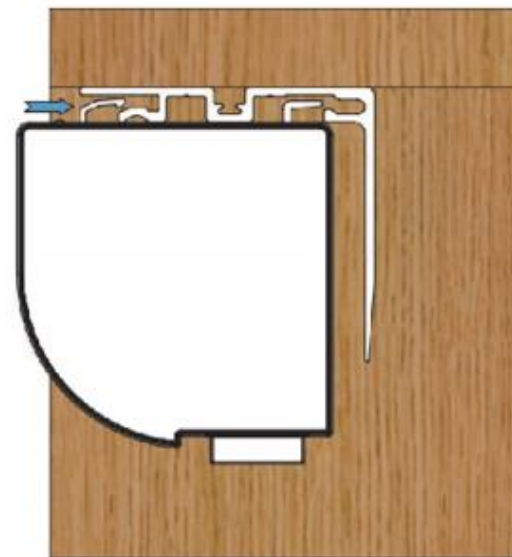

Mount "Fixed Tracks"

SmartScreen


Once positioned screw in place as per 2 3/8" procedure shown on the following page.

Tilt & flex the tracks into place, ensuring they correctly engage the tabs of the housing end caps.



Feed mesh edge into "Zip Track"

Pull the drawbar down 2" or more to make it easier to feed the zipper into the tracks. Repeat for opposite side.

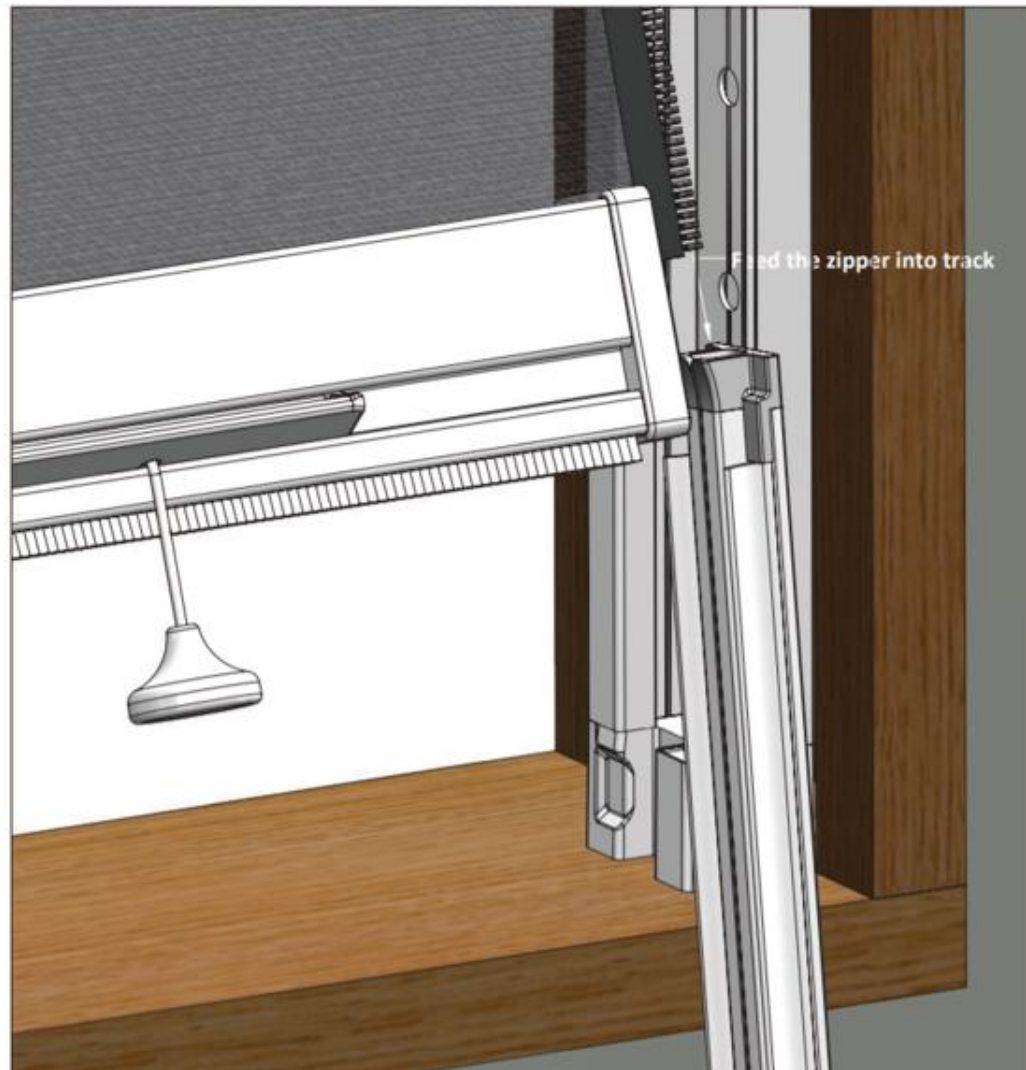


Complete the "Track" assembly for one side only

Ensure the "Drawbar" is correctly located within the track as shown


1- Rotate Zipper Track into position




2- Ensure the flexible wing is fully seated

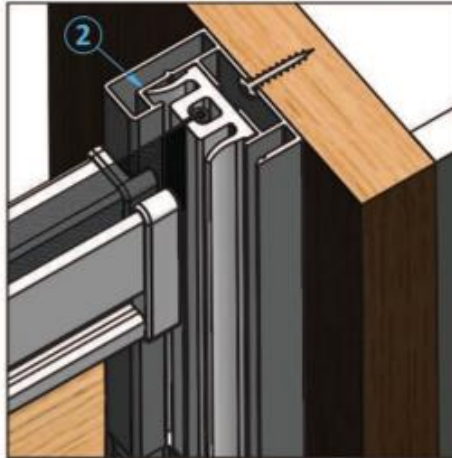


3- Align the "inner track" as shown

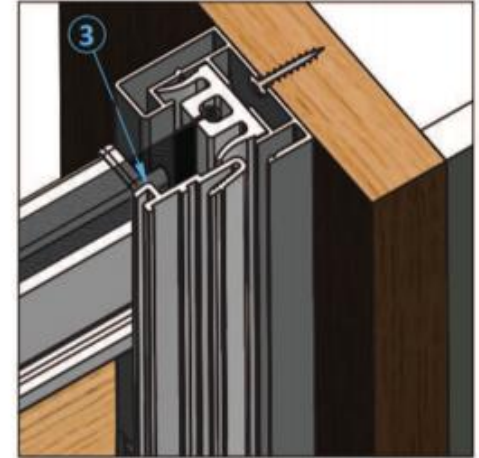


4- Press firmly ensuring it clicks into place

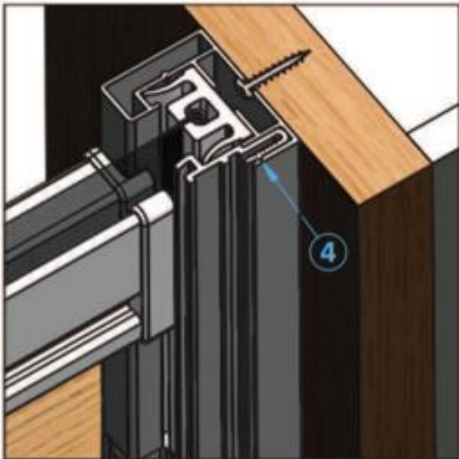

5- Align the "track retainer" as shown

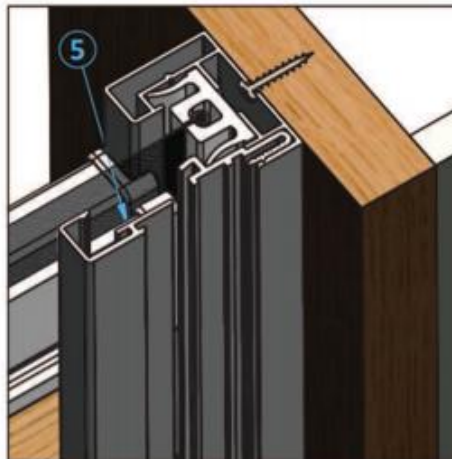


6- Press firmly or soft mallet until seated

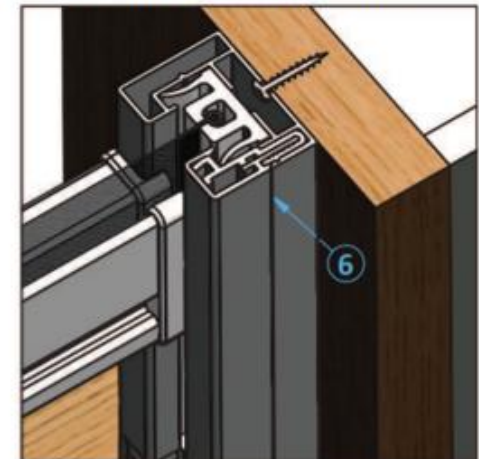



Position & secure "Drawbar" in tracks Bottom (sectioned) View

Use a small screwdriver to compress the brake allowing the drawbar to swing into place

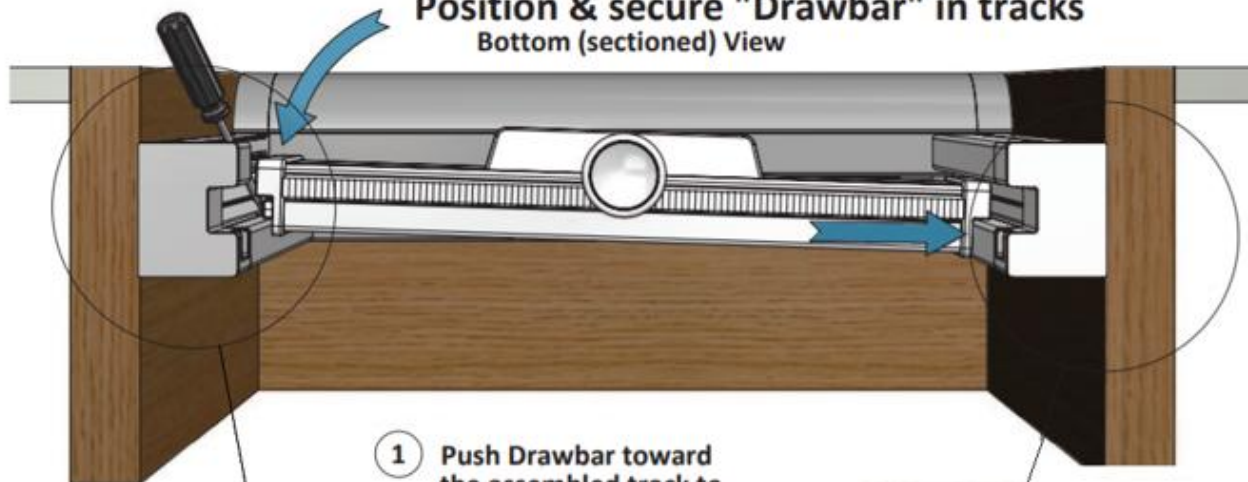

3 Once correctly positioned complete "Track Assembly" shown on previous page

1 Push Drawbar toward the assembled track to compress the brake against the "fixed rail"

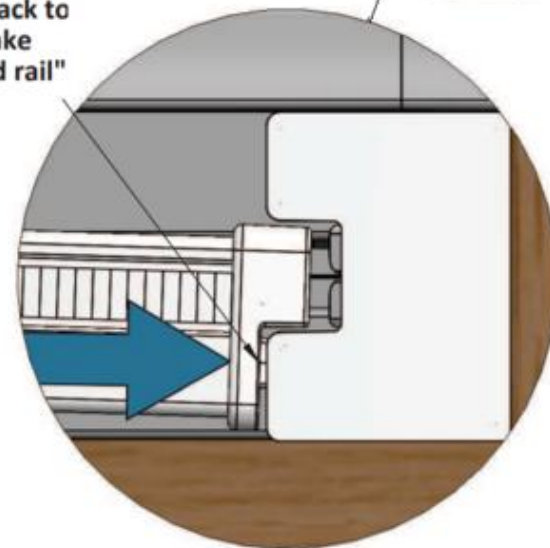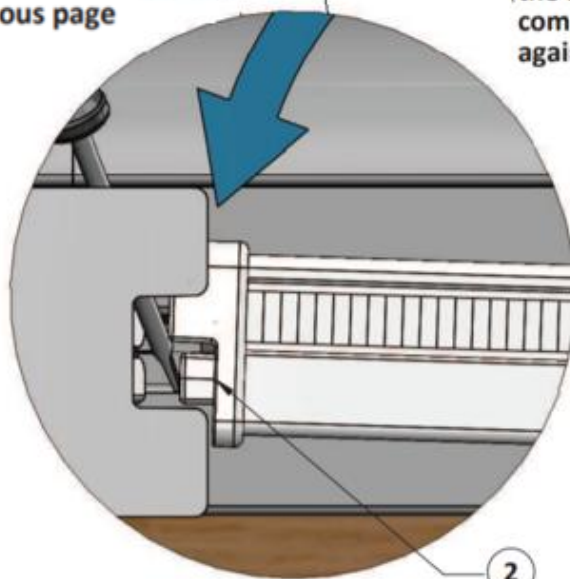

2


Check the blind operation

With the screen now assembled, spray a small amount of silicone spray into the zipper tracks. Be careful not to spray the outer tracks or braking surface.


Run the drawbar up & down to check the blind operates smoothly & locks into the "track caps" correctly. For windy areas, or areas with uneven ground the "drawbar locks" can be fitted. Refer fitting instructions herein.



Step-1-
Push lock into drawbar groove
until it snaps into place

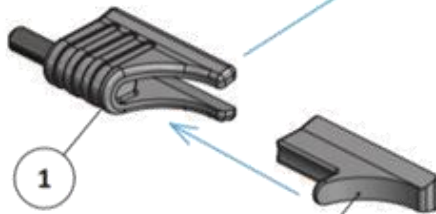

Step-2-
Slide key into lock groove
to secure it in drawbar

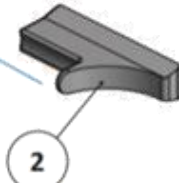

Step-3-
Mark location of lock-pin & drill hole
through track. Multiple holes can be
drilled at desired locations along the
track as needed

