

VistaView™

Service Manual


Document note: This guide and all related procedures and specifications are subject to change without notice. Printed copies may not reflect the latest revision. For most current guides, refer to wizardscreens.com/installation.

Product tech. support:

support@wizardscreens.com **1-888-949-3667**

- 3 ☐ **Low-Profile Handle**
- 4 ☐ **Rescreen**
- 16 ☐ **Pull-bar Endcap Replacement**
- 17 ☐ **Damaged Mesh**

- 1) Remove screw cap, then remove screw from front handle.
- 2) Remove rear handle (6).
- 3) Replace standard bushing with low-profile bushing (5).
(orient bushing according to labelled “TOP”)
- 4) Install low-profile handle (6) onto back. Fasten front handle screw, then cover with screw cap.

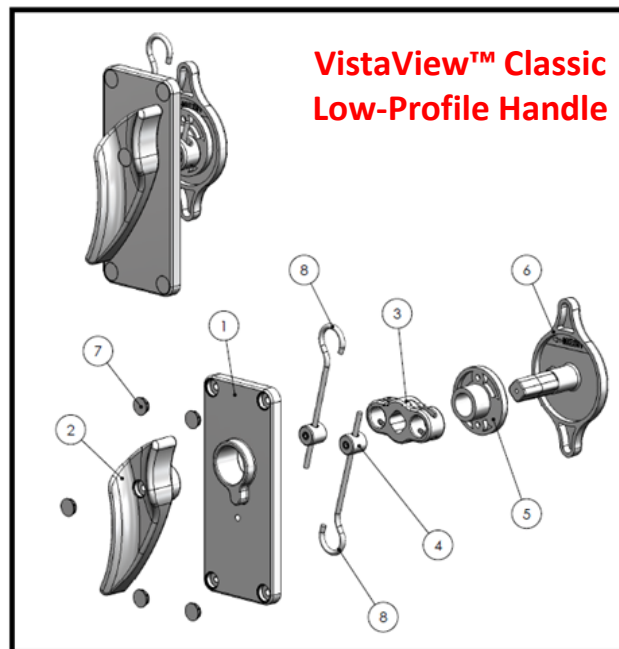




- Drill
- Track pieces x 2
- Needle nose pliers
- #1 & #2 square bits
- Knoll
- Wooden wedges



Zip Guide →

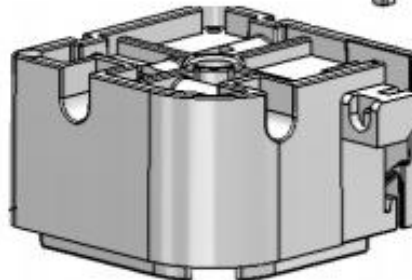

***VistaView Classic shown**

Remove corner screws in UPPER endcap.

Do not remove centre screw.



Insert wooden wedge where zip guide was to widen, allowing removal from zipper.



Separate endcap and housing.


Caution: Endcap under spring tension.



Hold spring. Remove the center screw and carefully remove end caps



Remove lower endcap in same manner.

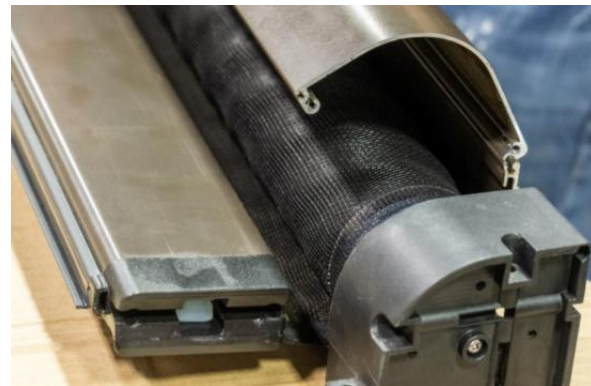


Invert pull-bar and remove mesh retainers.

Separate housing



Remove pull-bar from spline.

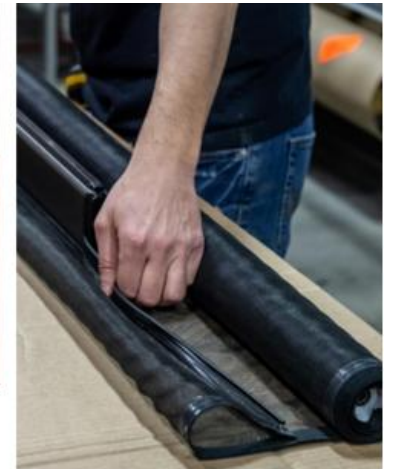

Spray dry silicone in pull-bar spline channel.



Feed pullbar along new mesh spline as shown.



Brakes disengaged





VV Classic rivet





VV+ handle-lock

Feed track piece along endcap & zipper at each end.

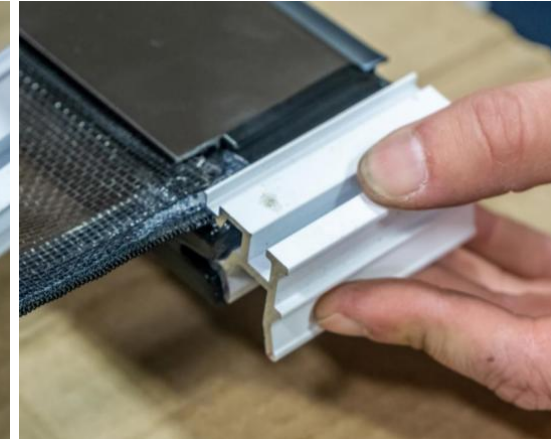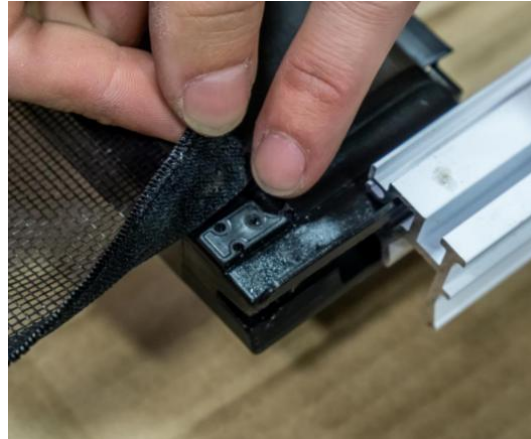

Use knoll to puncture screw hole in zipper fabric. Attach mesh retainer.

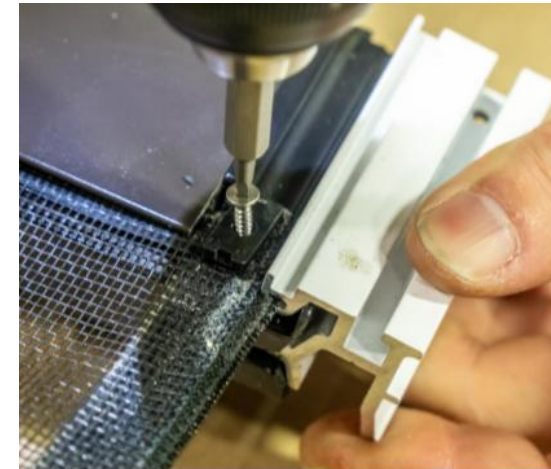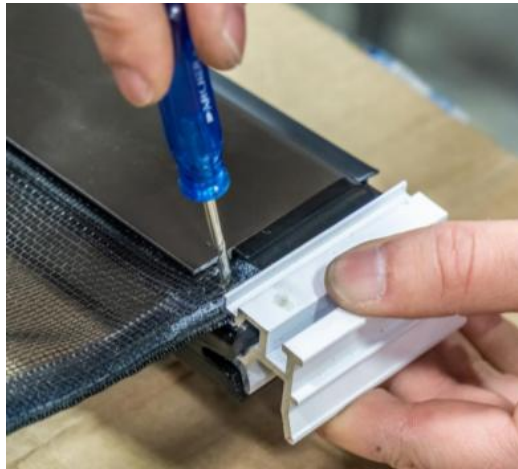

Return pull-bar to original position.



Wind spring per turn guide (**next page**)




Attach endcap onto housing. Ensure zipper is in keyhole slot.



	# of Turns			
Housing Size	60mm	70mm	80mm	100mm (VV+)
Less than 10' H	20	21	22	23
Greater than 10' H	20 – 22	21 – 22	22 – 24	24 – 25

*Note: above is for **regular mesh**. Add 2 more turns for specialty mesh.

TOP VIEW

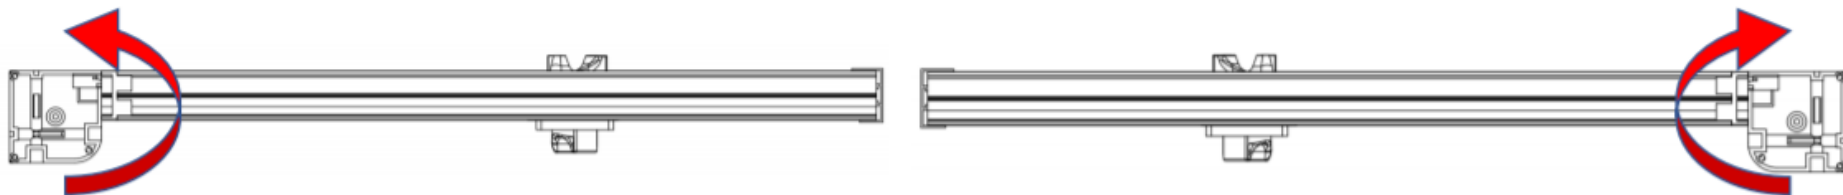

Wind Left Screens Counter-clockwise

Wind Right Screens Clockwise

Seat opposite endcap
onto housing. Ensure
zipper is in keyhole slot.




Attach endcap onto
housing.



VistaView™ Classic **VistaView™** Plus

Replaces wedges with zip
guides. Screw on.

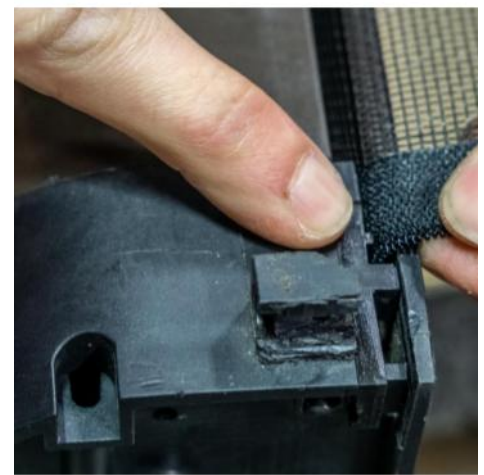

Detach front handle.
Loosen one set screw.



Unscrew corresponding
endcap. Pull out
slightly.



Tighten set screw.



Detach rear handle.
Unhook rod from
endcap.



Remove rods, leaving
attached to pivot
assembly.



Set aside, maintaining
orientation.



Replace endcaps.



Reverse engineer steps up to this point.

Brake shoe is tapered. **Longer edge** *flush* with edge of exit.

May require trial and error when tightening brake shoe.

Attach front handle.



If white strands visible, use fabric glue to attempt repair.



Use black felt marker to blend.



Otherwise, rescreen required.



Wizard

Screens & Shades