






Integrated System



Integrated System

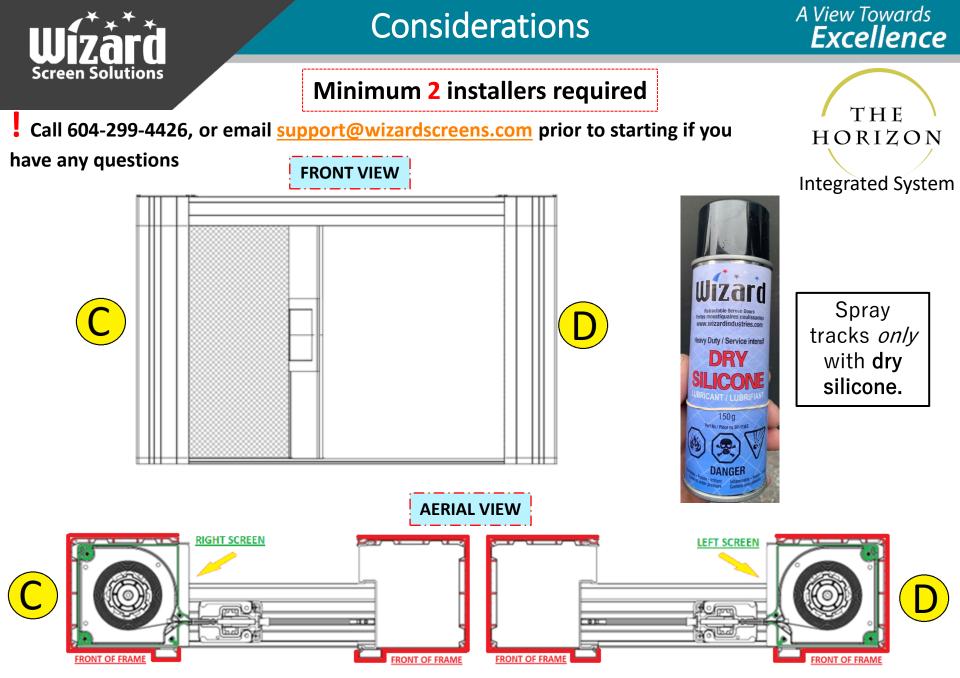






Integrated System

- 1. Confirm the frame is plumb, level, straight, square, and free of twist. Adjust where necessary if possible.
- 2. Confirm the sub straight is **level and straight**. Be aware that if it is *not:*
 - the screen may sag a little; and
 - the pullbar may bind,
 <u>both at where the humps in the floor are.</u>

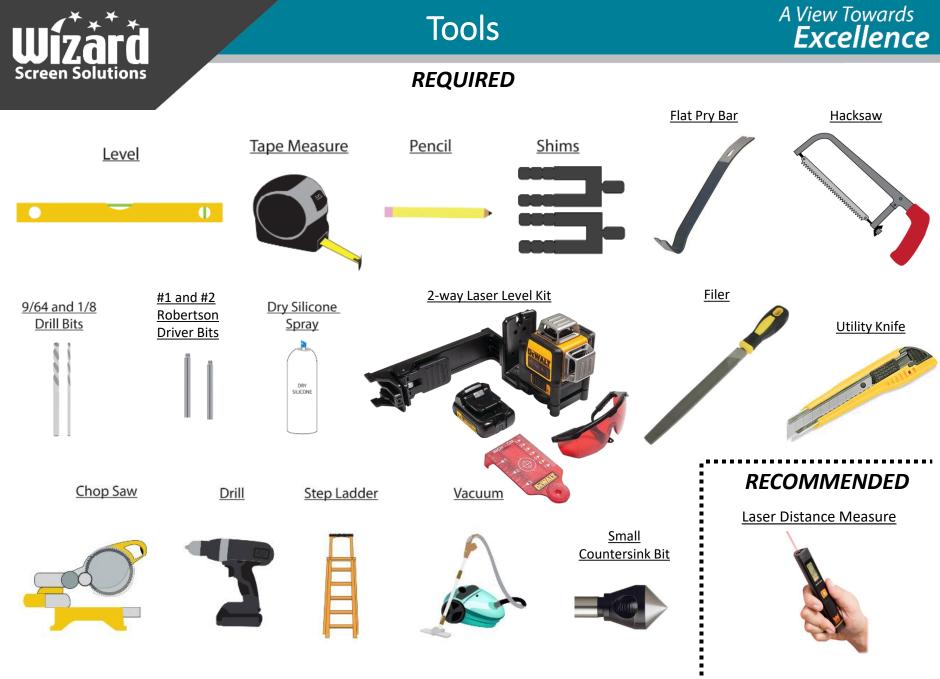



Temp. Jamb Fillers

A View Towards **Excellence**



Integrated System

Carefully remove temporary mill jamb fillers.








Notch & Insert Jamb Filler

A View Towards **Excellence**



1. Notch top of jamb filler accordingly.

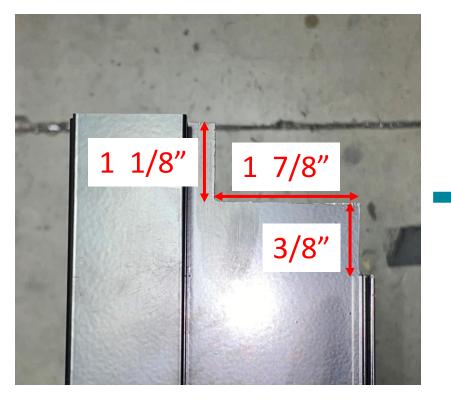

2. Install jamb filler.





Insert Screen Unit

Install screen unit. See pg 2 for orientation.




2. Release brake using supplied **RED** wedge.





Header Insert Orientation

A View Towards **Excellence**

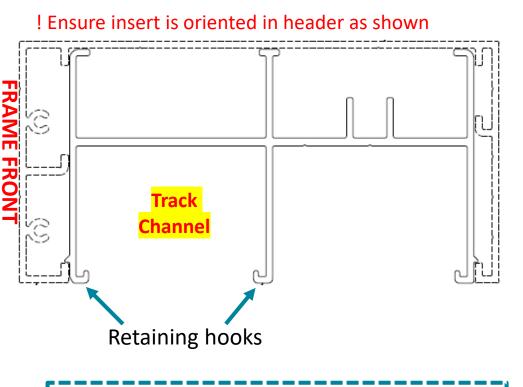

THE HORIZON

Integrated System

Header insert length will be **1/8" shy**. This means the housing will be removable without having to remove the header insert.



Cut and Install Header Insert

A View Towards **Excellence**


1. On the receiver end of **header insert**, trace jamb filler profile using cut-off.



3. Attach header insert.




2. Cut the header insert to traced marks.

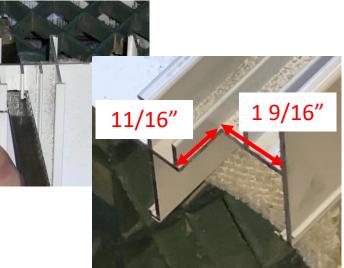

* Ensure **track channel** is on the correct side where screen will run!



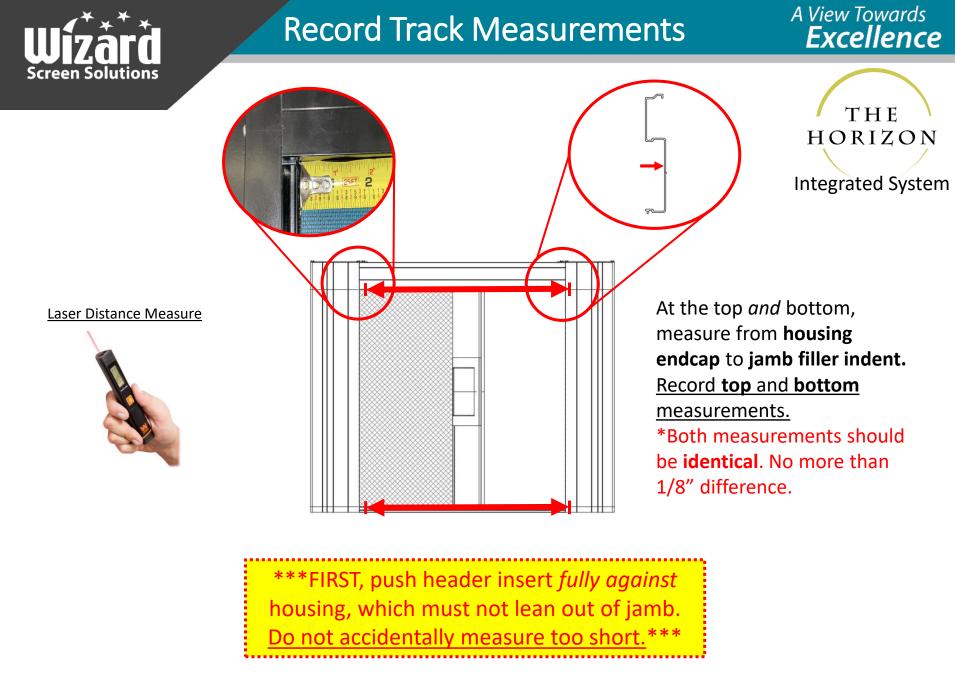



Lower track:

- 1. Flush lower track components at one end, track runner against latch.
- 2. Cut lower track to recorded **bottom** measurement.
- 3. Cut lower track runner 1/8" shorter to accommodate endcap spigot.

Upper track:

- 1. Flush <u>upper track components</u> at one end, track runner against latch. (First see "Track Limiter" page for track wings prep.)
- 2. Cut <u>upper track</u> to recorded **top** measurement.

DO NOT CUT TRACKS AND RUNNERS TOO SHORT

Prepare track runner entry end:

Slightly counter-sink.



2023-03-02

Barely trim the corners off.



3-Sided Frame 100mm SINGLE Screen Installation




Integrated System



Deburr and clear debris.



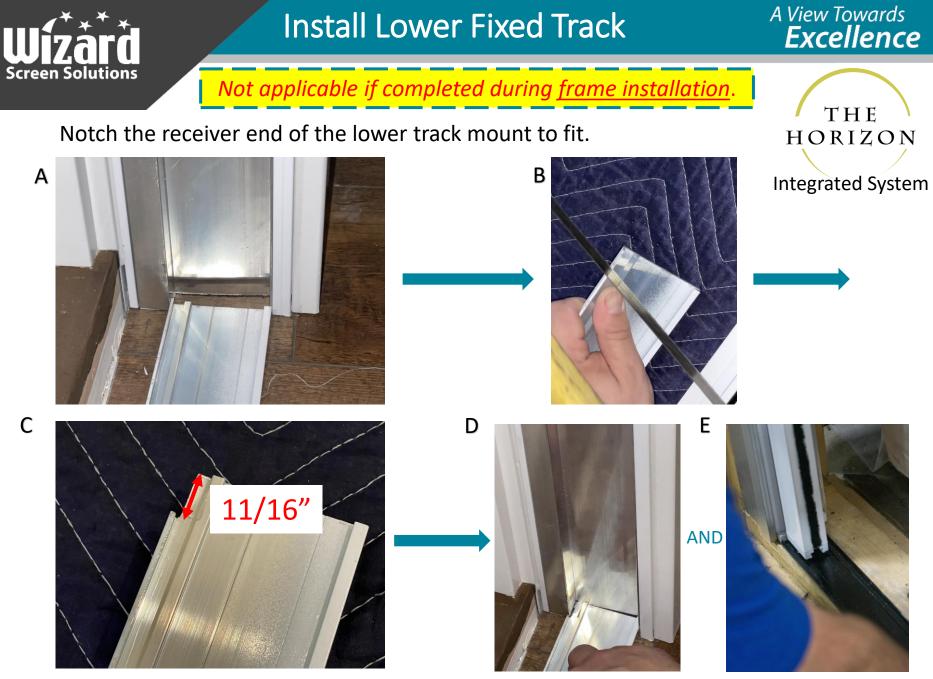

2023-03-02



Affix Lower Track Mount

Not applicable if completed during <u>frame installation</u>.

- 1. Lay down lower track mount.
- 2. Insert track cut-off through the pull-bar. Push track fully against housing so that it encompasses spigot. Housing and track mount *must* be square to each other **no gaps**.
- 3. Drill and countersink the lower track mount as shown below and fasten with FH screws.
- 4. Drill and countersink remaining holes every 18" in pairs and fasten. Shim where necessary. Housing and lower track mount must maintain alignment.
- 5. Repeat other side.
- **Tip!** use the lower track mount as a drill guide to mark the hole locations on floor surface for pre- drilling if required (Ie. Tile or concrete floor that requires screw plugs).



THE

HORIZON

A View Towards

Excellence



Install Lower Track

A View Towards **Excellence**

1. Remove track cutoff.



2. Lift pullbar. Slide track runner along zipper.



3. Feed lower track through



4. As you lay track down...



5. ...push fully against housing – **no gaps.**



6. Insert spline into groove.





Track Limiters for Upper Tracks

A View Towards **Excellence**

1. Insert track limiters into upper track wing slots on housing end **fully**.






! If track limiter is *not* fully inserted, screw head may interfere



2a. Butt wings against

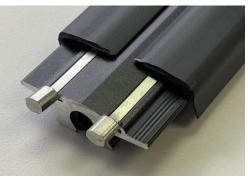

2b. Cut off insert part the length of track limiter.





If cutting **wings** with scissors, cut angle off corner




Insert Upper Track

A View Towards **Excellence**

RECOMMENDED

At receiver end, cleanly cut track wings
 4" short. This allows track to more easily
 pass above jamb filler when installing.

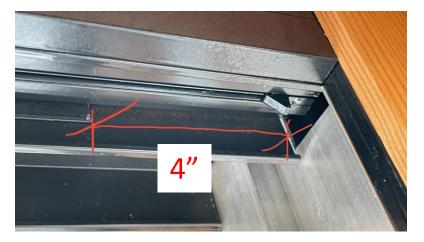



If cutting **wings** with scissors, cut angle off corner

THE HORIZON

Integrated System

2. Insert the upper track at angle into the jamb. Ensure track floats freely in track channel. Move to back of jamb.



OPTIONAL

To more easily install the upper track, you may *temporarily remove* the housing <u>after you have recorded the measurements</u> (see step "Record Track Measurements"). After you have inserted the track, put housing back in. You will *not* have to remove the header insert as there is a 1/8" gap, allowing you to tilt housing in. This would have to be done *before* the lower track is installed.



Install Upper Track

A View Towards **Excellence**

3. Feed track runner along zipper, then track through pullbar endcap, pushing fully against housing endcap – **no gap**.





4. Ensure track floats freely.



5. Ensure jamb filler is *not* notched too low & **no gap** between track and jamb filler.





Checklist

TEST THE UNIT

A View Towards **Excellence**

THE

Check the following:	√ or ×
Frame is Plumb, Level, Square, and not twisted?	
Tracks are level, parallel, and plumb side-to-side and front-to-back?	
Housing on the ground AND plumb?	
Housing mesh slot has not been squeezed during the install?	
Tracks are fully against the housing?	
The track limiters are on the entry end of the upper track?	
Tracks are fully against the housing?	
Track runners are not cut too short?	
Zippers are following through the housing endcap keyholes?	
Track runners have been sprayed inside with dry silicone?	

HORIZON Integrated System If any problems are not resolved, call 604-299-4426, or email support@wizardscreens.com before leaving site!

If necessary, review The Horizon Troubleshoot Manual