




Face Fit





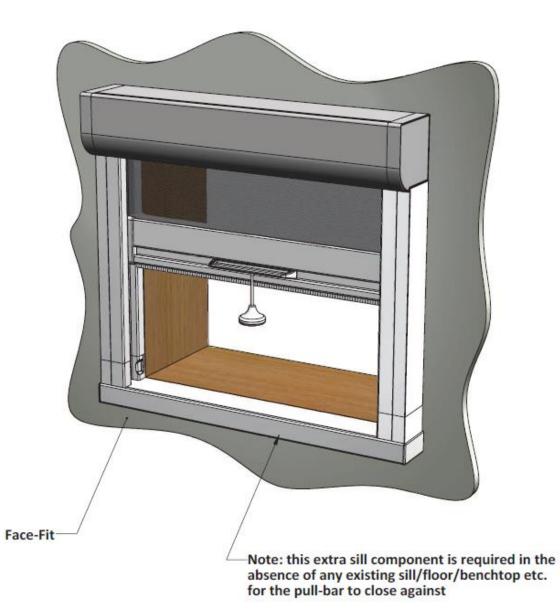



- 1. Screens are tested prior to packaging.
- 2. Store screens in original packaging until installation.
- 3. Inspect all products and components prior to installation.
- 4. <u>Photograph and Report</u> damaged or missing parts <u>immediately</u> to <u>orders@wizardscreens.com</u>
- 5. Do NOT draw out screen until tracks are installed.
- 6. If affixing screen system directly onto door frame and threshold, ensure fastening will NOT negatively impact the performance of the door and hardware. Consult door manufacturer.

If you have questions, refer to the <u>troubleshoot manual</u> and <u>maintenance & service guide</u> first. If necessary, contact support while on-site: <u>support@wizardscreens.com</u> 604-299-8878




Spray tracks *only* with **dry** silicone.










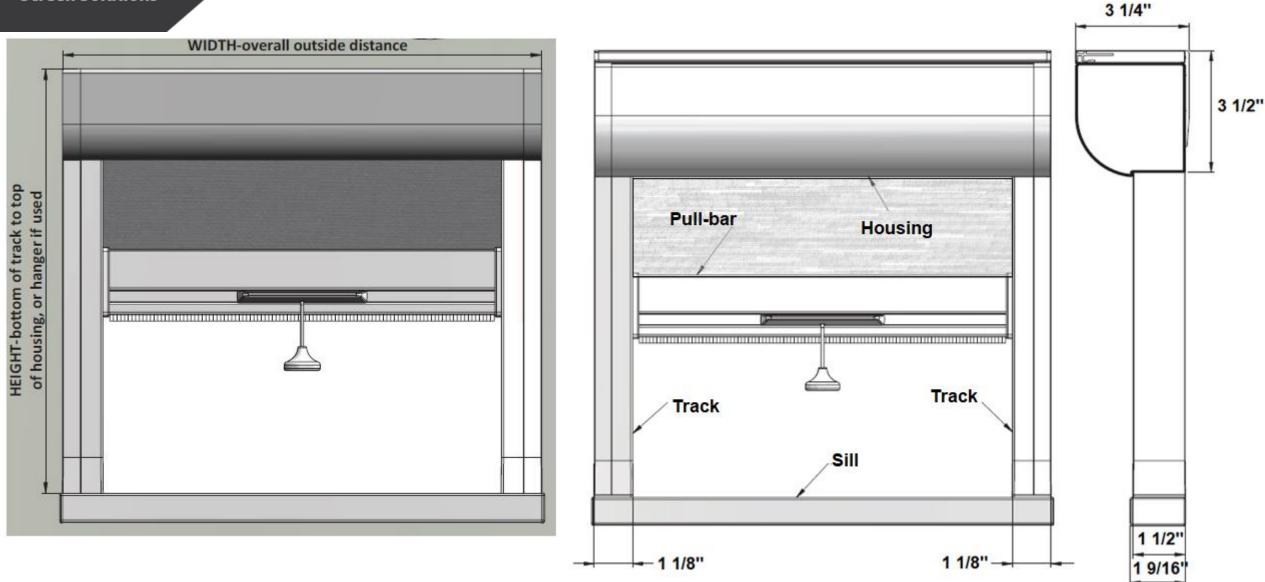

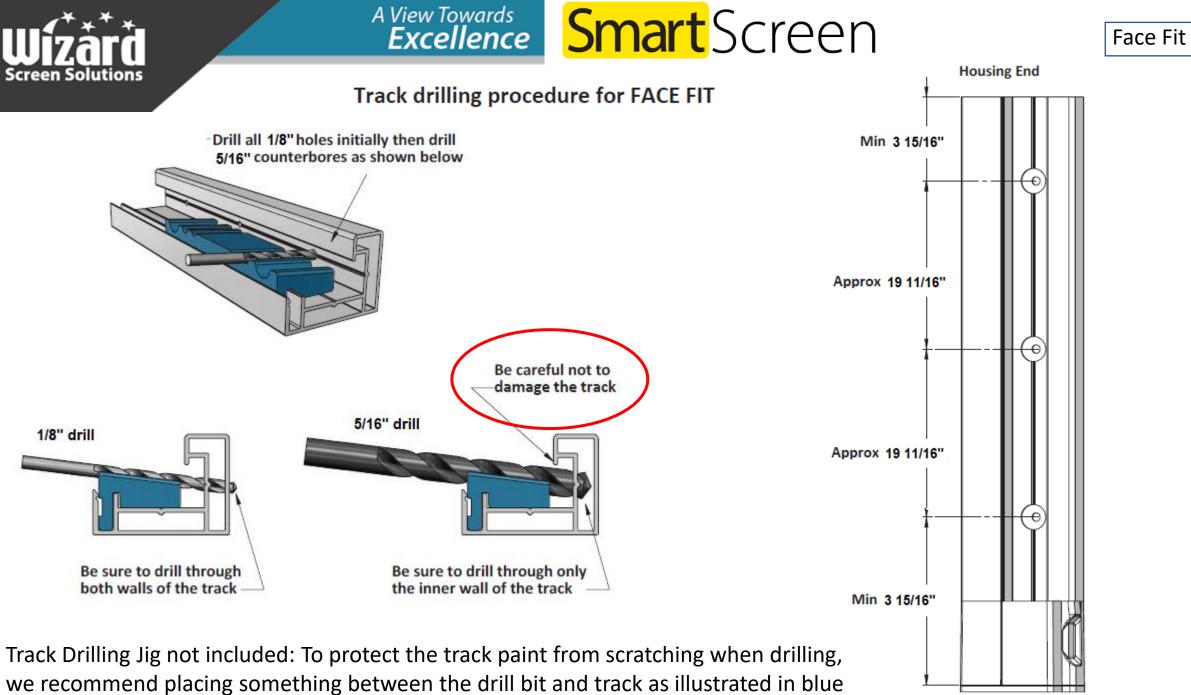

s illustrated in blue


Cap End








Drill "Housing Hanger" (for 80 screens only)

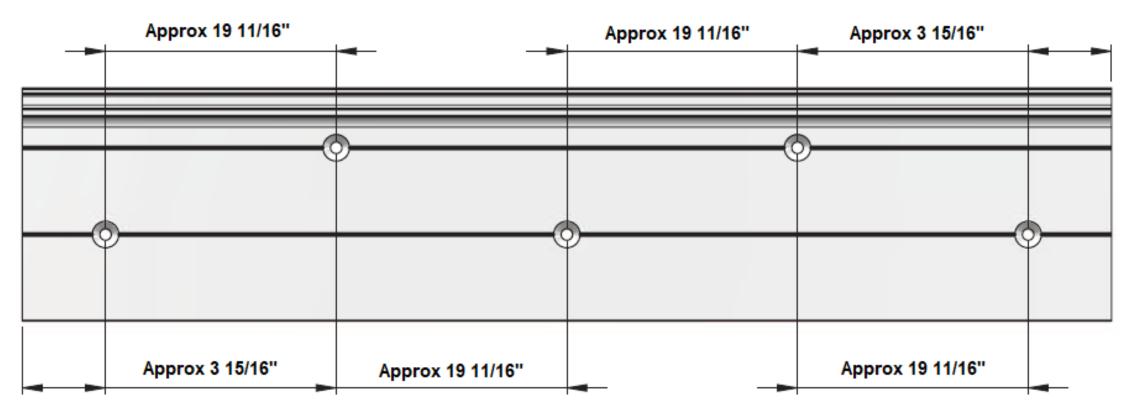



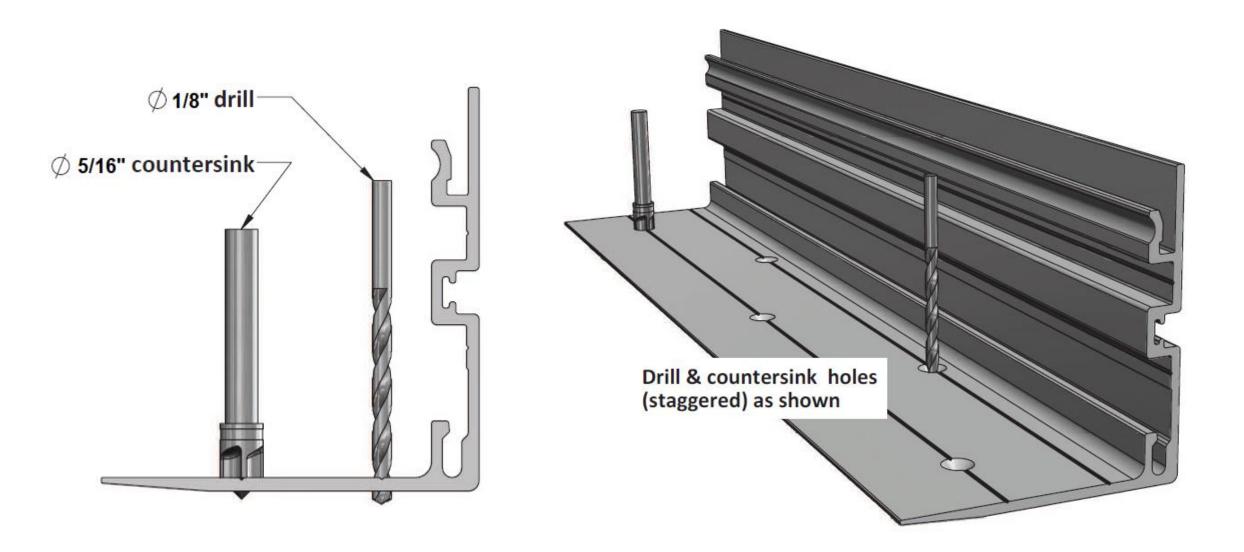






Mount "Housing Hanger"

Secure the hanger to wall at the HEIGHT specified when ordering the screen. Ensure it is centred to the opening, or offset 8mm for 80mm motorised versions




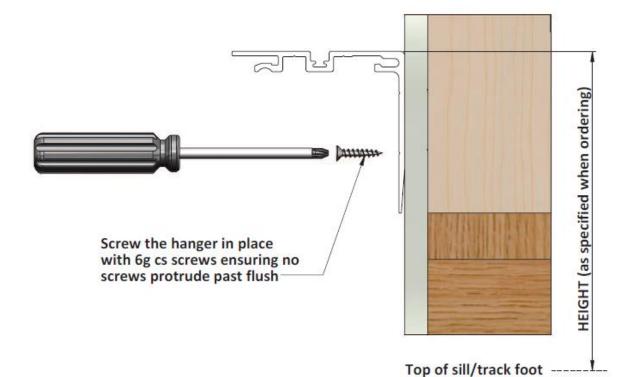





Lift & support the housing locating the prongs into hanger opening. Ensure it remains firmly against the underside on the hanger, then starting at one end push the housing toward the wall, working your way along the entire length to engage the securing clip.

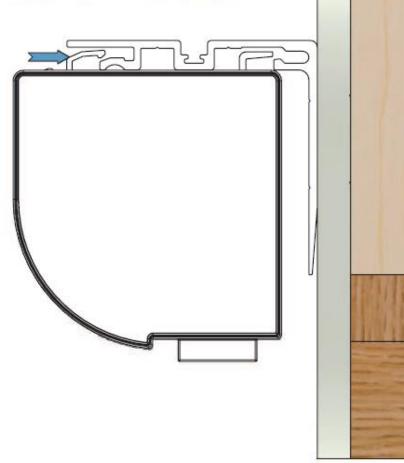





Ensure this clip is engaged before fitting the housing lock **N**RI j. R 125 Slide housing lock into hanger, press firmly until it clips into place 1








Mount "Fixed Tracks"

Lift the tracks into place ensuring they correctly engage the tabs located on the housing end caps

Once positioned screw in place ensuring tracks remain both vertical & parallel

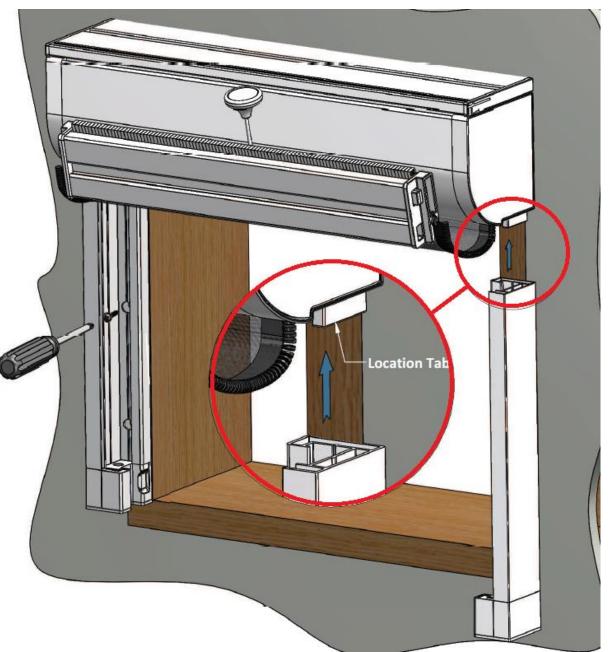









Mount "Sill" (where required)

STEP-1- Screw "Sill Mount" ensuring it is centred & hard up against the underside of track foot.

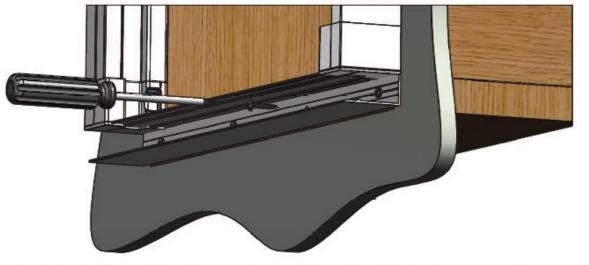

STEP-2- Clip "Sill Cover" into "Sill Mount" ensuring it is centred & clips have correctly engaged.

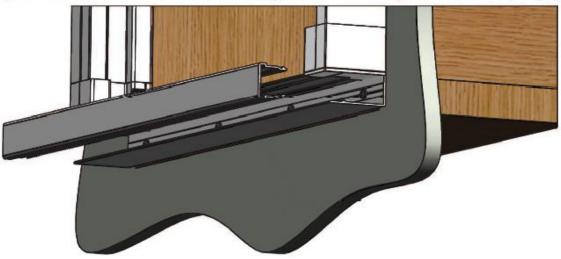









Mount "Sill" (where required)


STEP-1- Screw "Sill Mount" ensuring it is centred & hard up against the underside of track foot.

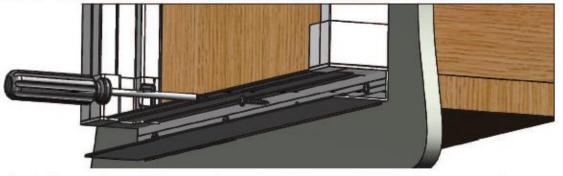

STEP-2- Clip "Sill Cover" into "Sill Mount" ensuring it is centred & clips have correctly engaged.

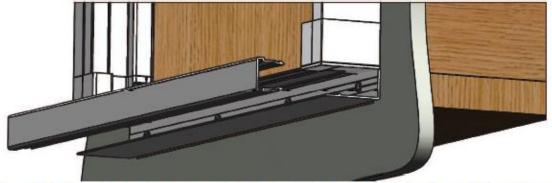

STEP-3- Press "Sill Caps" into "Sill". Use a flat timber/plastic & lightly tap to seat them if required

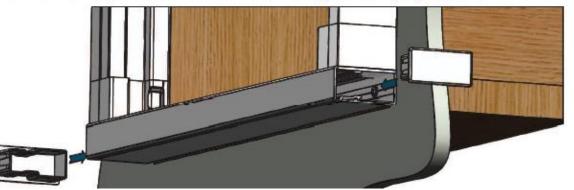






Feed mesh edge into "Zip Track"

Pull the "pull-bar" down 20" or more to make it easier to feed the zipper into the tracks. Repeat for both sides

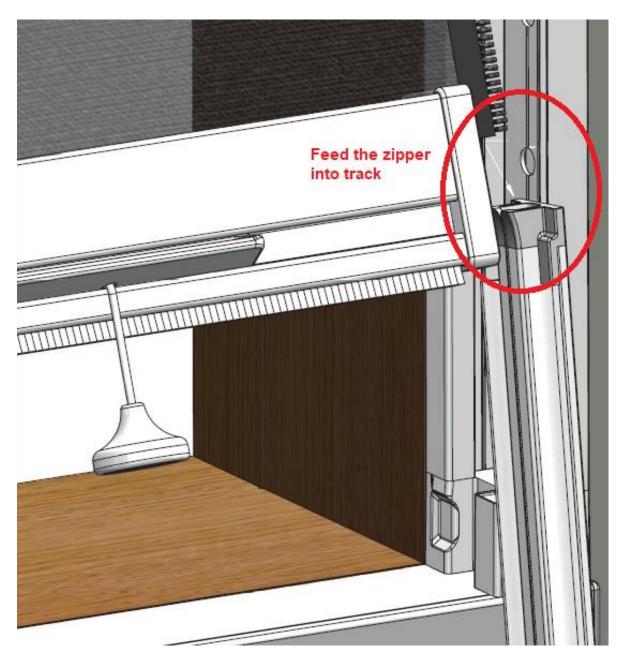






Complete the "Track" assembly for one side only


Ensure the "pull-bar" is correctly located within the track as shown

1- Rotate Zipper Track into position

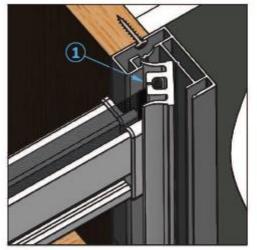


4- Press firmly ensuring it clicks into place 5- Align the "track retainer" as shown


2- Ensure the flexible wing is fully seated 3-

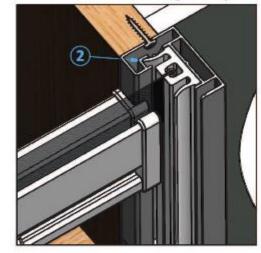



3- Align the "inner track" as shown

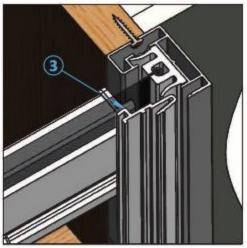


6- Press firmly or soft mallet until seated

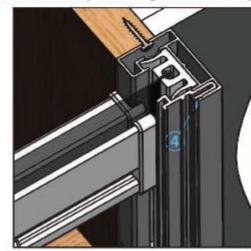

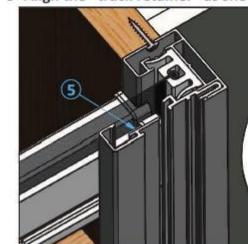

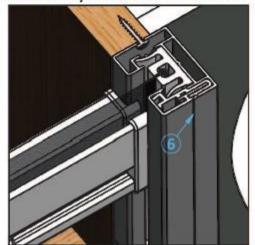



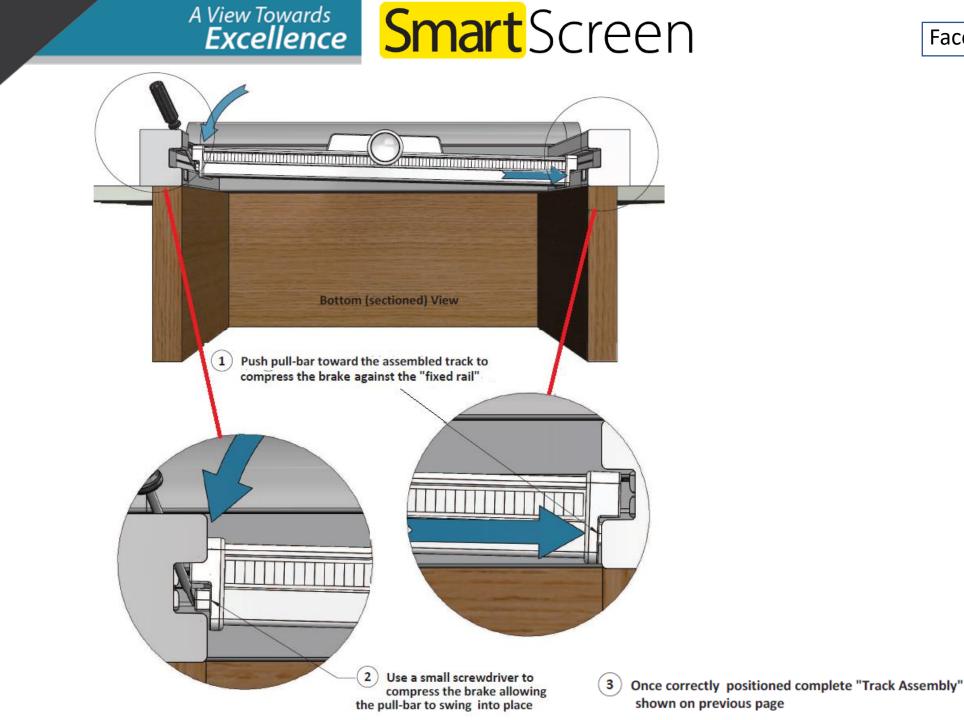






A View Towards Excellence Smart Screen

Check the screen operation

With the screen now assembled, spray a small amount of silicone spray into the zipper tracks. Be careful not to spray the outer tracks or braking surface. Run the pull-bar up & down to check the blind operates smoothly & locks into the "track caps" correctly. For windy areas, or areas with uneven ground the "pull-bar locks" can be fitted. Refer fitting instructions herein.

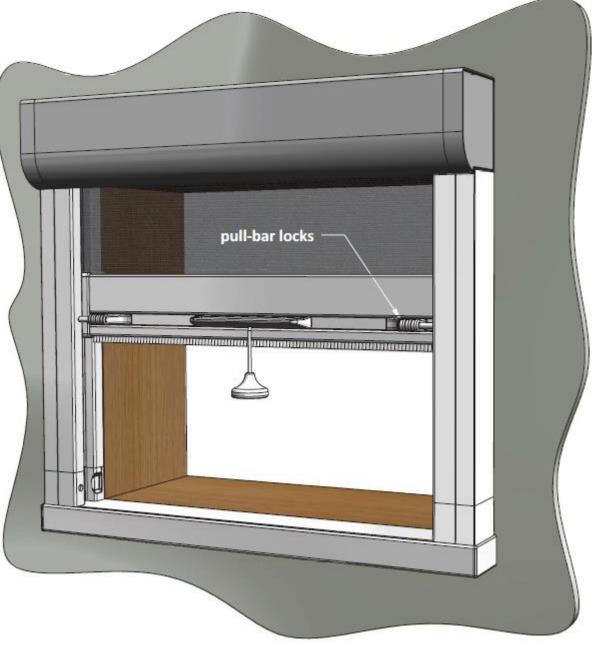

Face Fit





