



A View Towards **Excellence**



Recessed Cavity Considerations

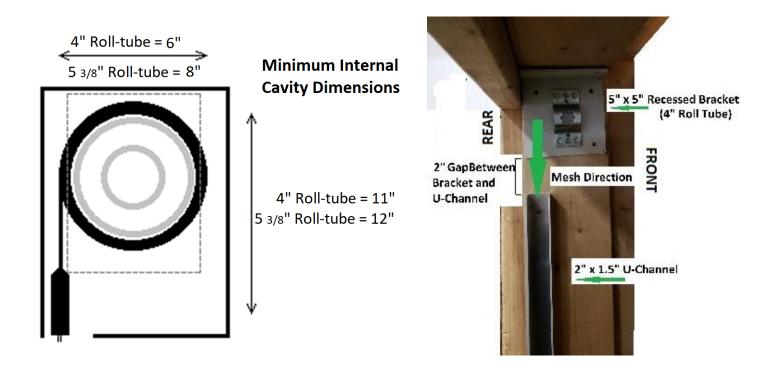

Birds-Eye View of Cavity

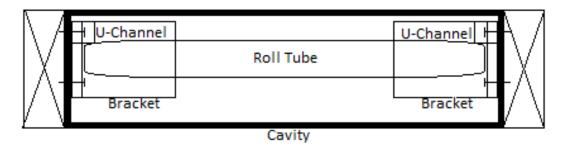

- U-channels aligned with back and rear of brackets.
- Cavity width ≥ Order Width


Cavity must allow rolled screen to be:


- 1. Serviceable
- 2. Removable
- 3. Functional without impediments



Smart Screen Recessed

Front-View of Recessed Screen (screen rolling furthest away from you)

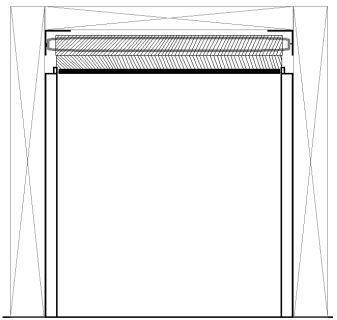

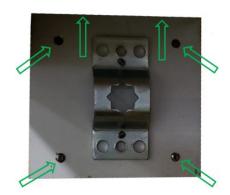

Bracket Orientations and Fixture Points





Removable Access Panel

A removable access panel may be built to further hide the rolled screen.



A View Towards **Excellence**




U-channels

U-channels can be immediately affixed or nominal 2x lumber can be temporarily affixed and exchanged with u-channels at appropriate time.

*Stone veneer consideration

At the top 4', the veneer must *not* project beyond the edge of the U-channel. Room is required to fit the rolled screen.

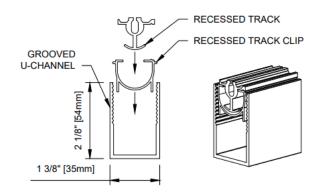

RECESSED TRACK

