



BetterView

BetterView

Installation Guide

Pull-across



Pull-down





Considerations


A View Towards **Excellence**




Spray tracks *only* with **dry silicone**.



MUST be installed plumb, level, straight, and square.

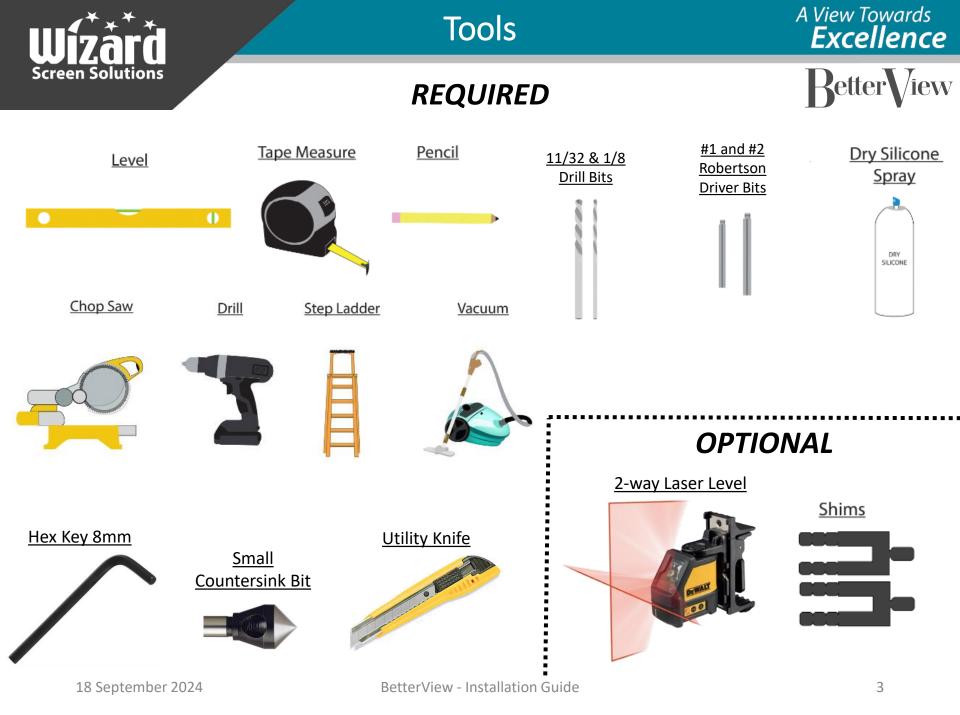


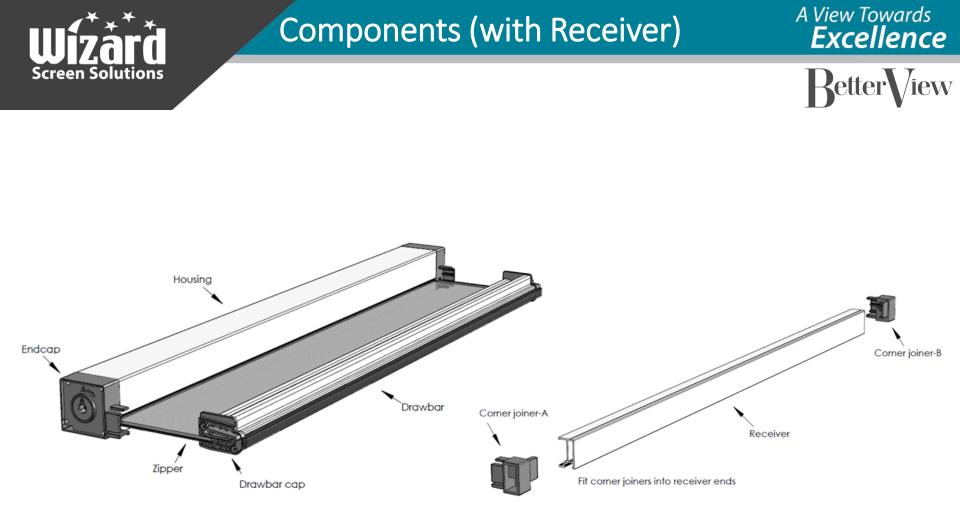



Components (without Receiver)

A View Towards Excellence

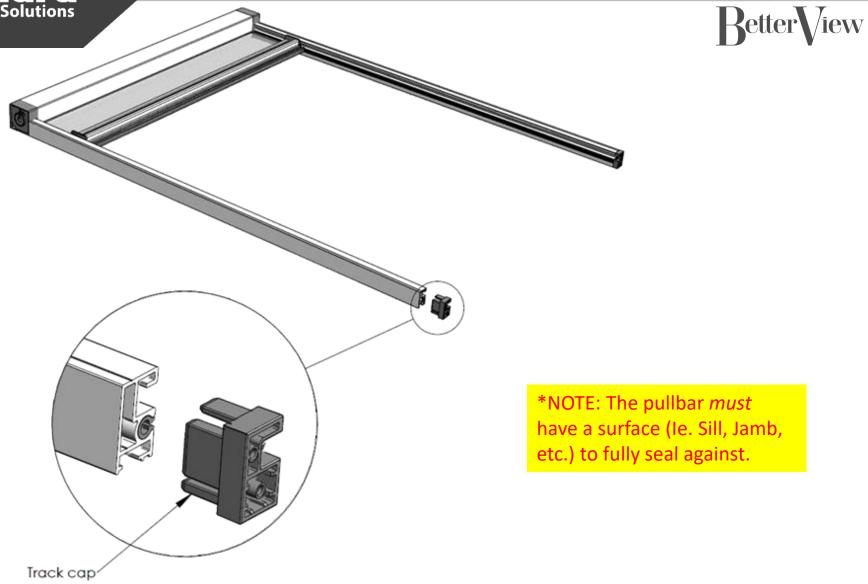




Track Insertion


A View Towards **Excellence**


<u>Chop Saw</u>

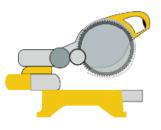

Tracks

- 1. Cut to size
- 2. Prepare track runner entry end:
 - i. Slightly countersink
 - ii. Barely nip corners off
 - iii. Deburr
- Insert track fully against housing

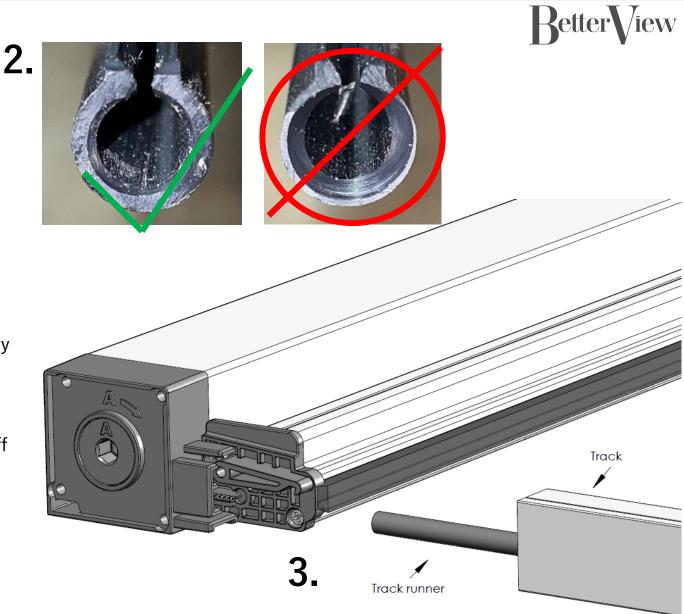

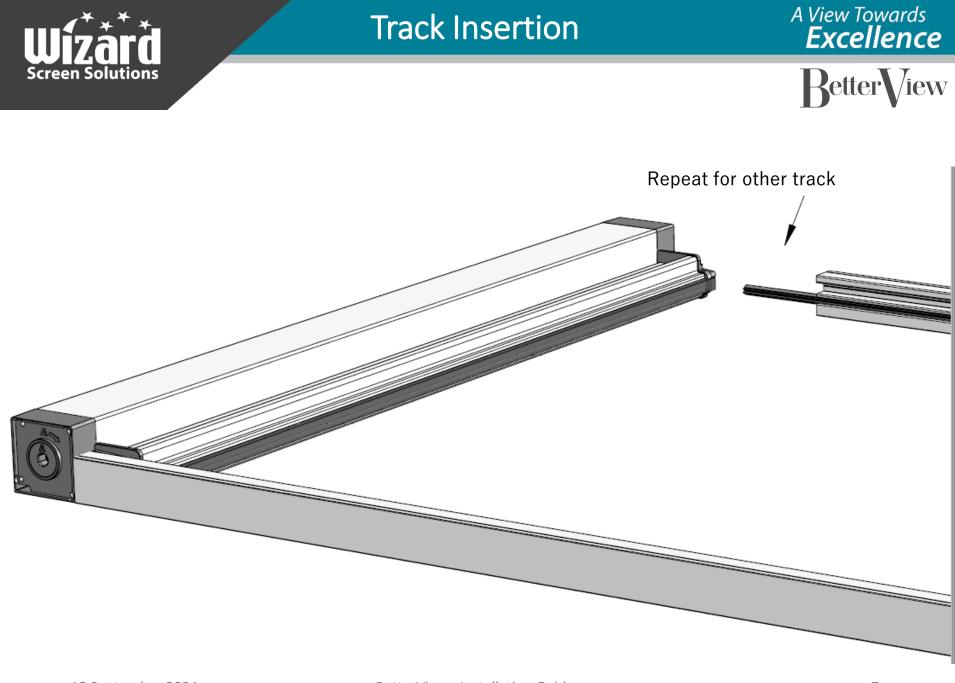




Receiver or Track Cap Attachment

A View Towards **Excellence**



Attach remaining components.

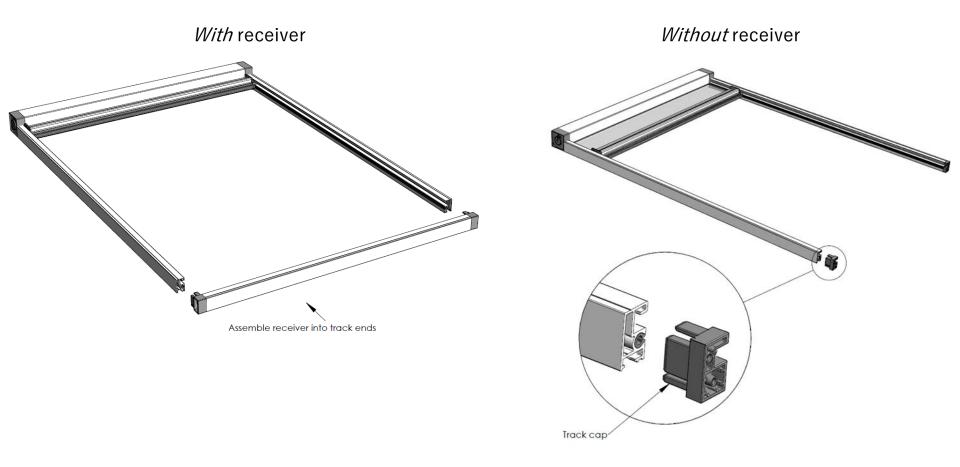




Screen Handling

A View Towards **Excellence**

BetterView

Move pullbar across & latch to receiver before turning the screen over. This will increase rigidness of frame when handling.

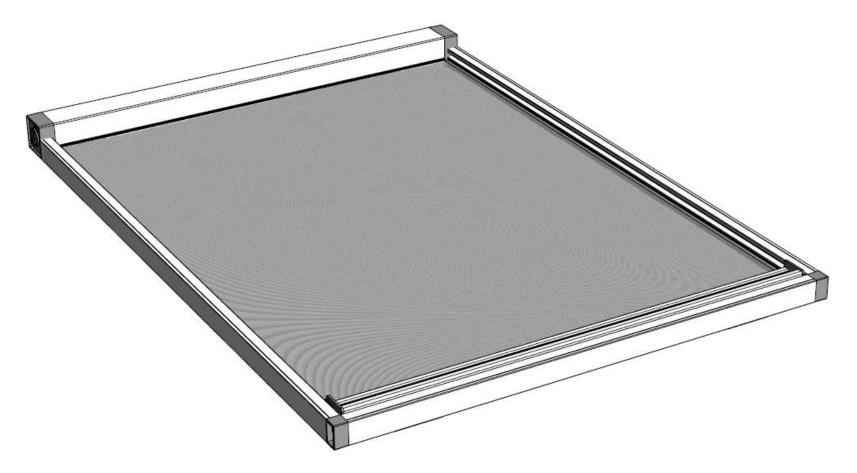




Screw Corners

A View Towards **Excellence**

BetterView

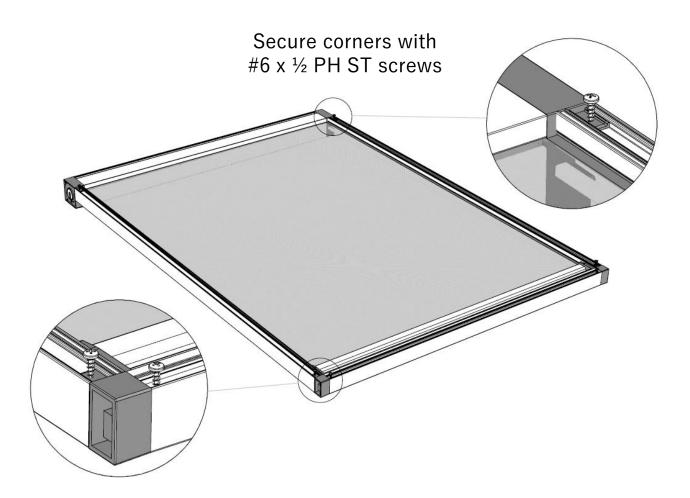




ALTERNATIVELY

A View Towards **Excellence**



ALTERNATIVELY

Assemble unit face-down.

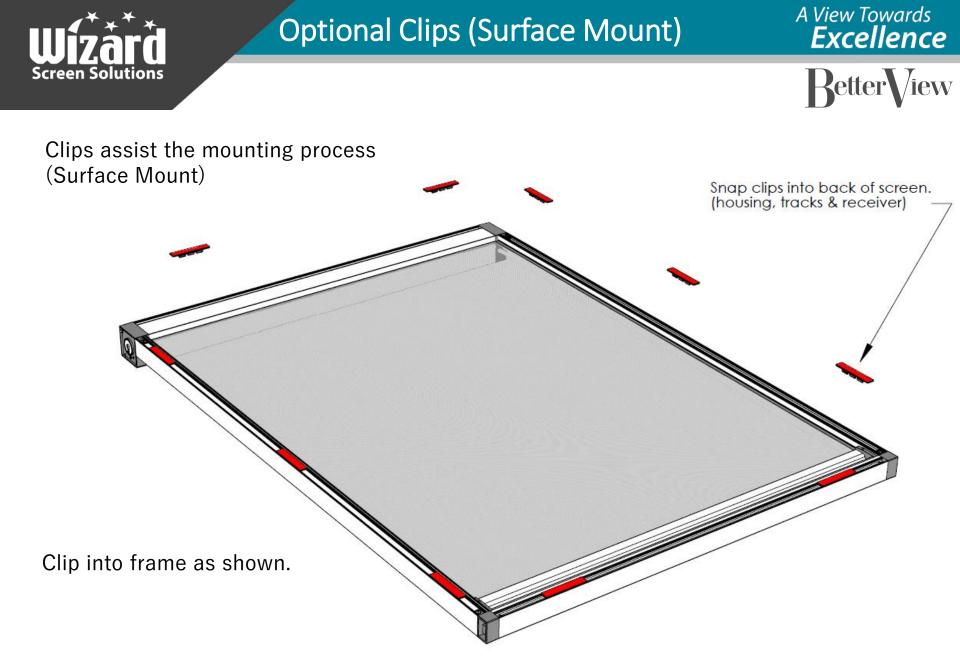



Optional Clips (Surface Mount)

A View Towards **Excellence**

BetterView

TIP: You can temporarily stick a
dowel pin to the tape to prevent
accidental contact with the
mounting surface during alignment.
When ready to mount, remove the
dowel and press down. Repeat this
for each clip as needed.

Section View

Peel off adhesive backing



Wizard Screen Solutions A View Towards **Excellence**

BetterView


*NOTE: If the **tensioner** will be *inaccessible* when in place: Lean the unit against a wall (protecting surface) and test the function of the unit. If necessary, increase/decrease tension per the last 2 pages.




Affix Frame

A View Towards **Excellence**



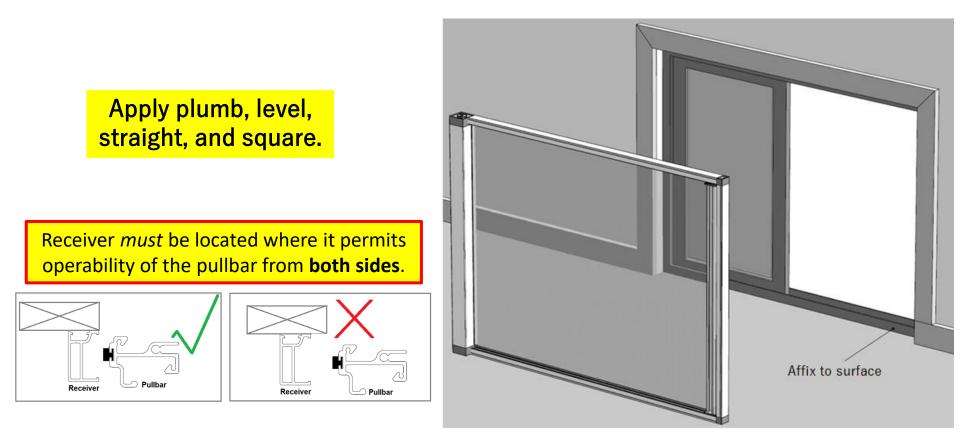

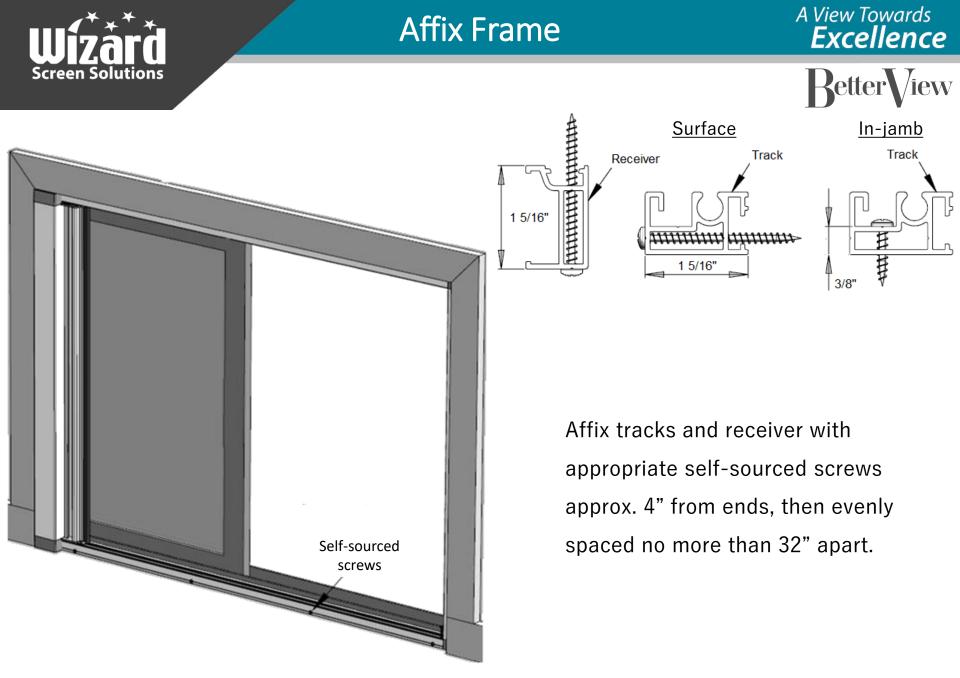




Optional BetterView Sill Adapter

A View Towards **Excellence**

BetterView

- Pre-drill and countersink pilot holes through BetterView Sill Adapter (BSA)
- 2. Affix BSA to sill
- 3. Screw track into BSA

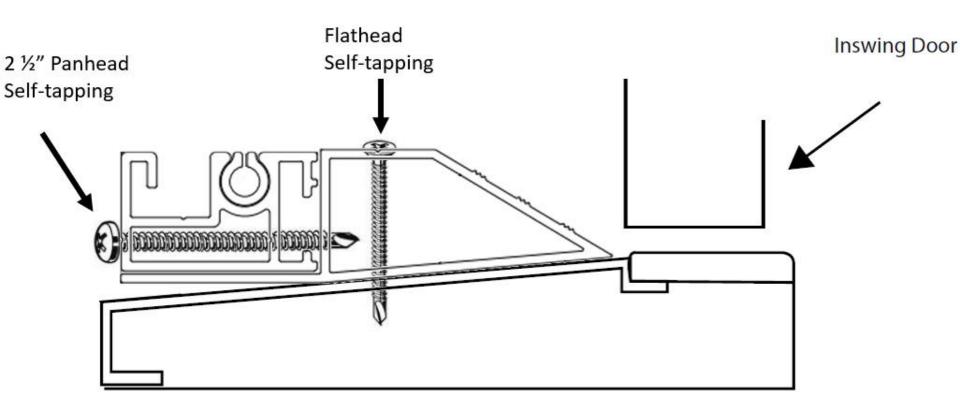




Optional BetterView Handle

A View Towards **Excellence**



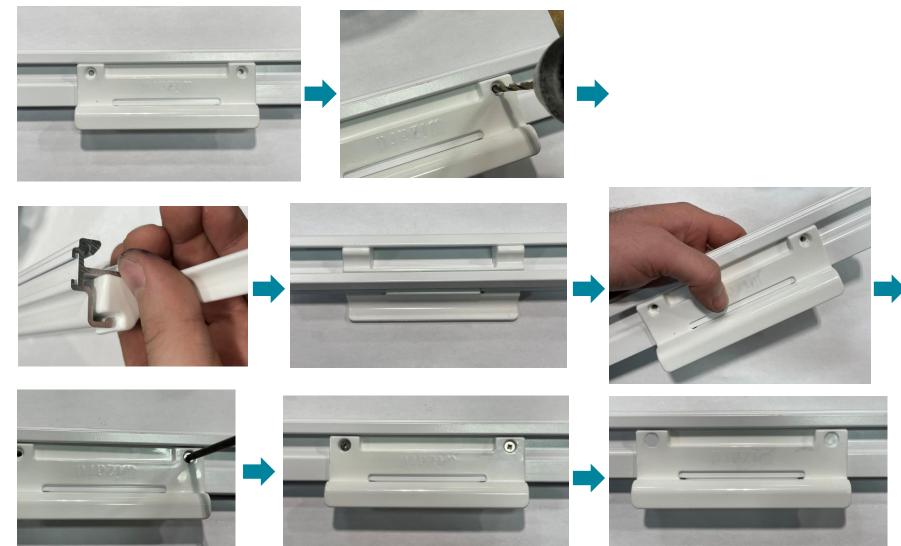

18 September 2024





Increase Tension


A View Towards **Excellence**

BetterView

Do NOT use a drill to wind spring Do NOT exceed 25 turns from 0

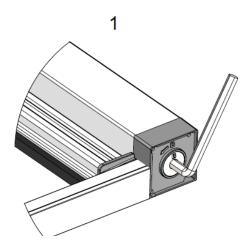

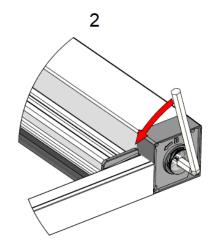

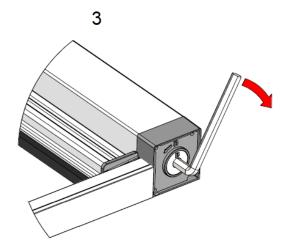

To tension spring insert 8mm hex key into the top tensioner: IMPORTANT: Only rotate the TOP tensioner (marked 'A' for RH opening screens and 'B' for LH opening screens)

> 2 Rotate in the direction of the arrow shown on the endcap. A number of turns can be made to achieve the desired tension.

> > Once tension is achieved carefully allow

3 the tensioner to re-seat inteslf back into the endcap before removing the hex key. (Spring tension will hold it in place)




Decrease Tension

A View Towards **Excellence**

BetterView

Do *NOT* use a drill to wind spring Do NOT exceed 25 turns from 0

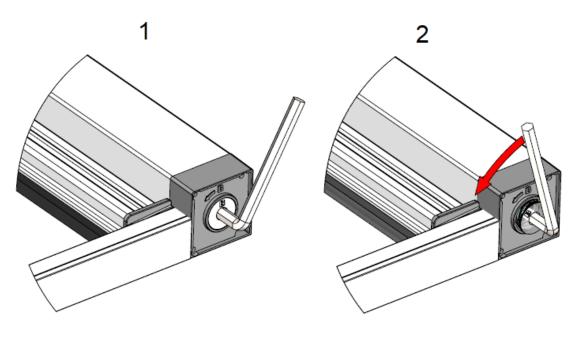

- 1. Insert 8mm hex key into top tensioner
- 2. Rotate in the direction of the arrow shown on the endcap until tensioner is fully out.
- 3. Allow to rotate in **opposite** direction the desired number of turns. Then apply pressure, allowing tensioner to reseat itself.